


I'm not robot  reCAPTCHA

Continue

Post questions, comments, reviews or errors in the comment box below. Your file is ready ... DOWNLOAD THE PDF CLICK HERE TO DOWNLOAD BISSELL CROSSWAVE PET PRO 2303 (01) PDF GUIDE TO PDF SUMMARY CONTENT: CROSSWAVE® PET PRO AND USER GUIDE 2303 SERIES BISSELL.COM 2 IMPORANT SAFETY INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USING YOUR CROSSWAVE® PET PRO. When using an electrical appliance, basic precautions should be taken, including: WARNING TO REDUCE RISK FIRE, ELECTRIC SHOCK, OR INJURY: Connect to a properly grounded socket only. See the grounding instructions. Don't change the three-tooth ground fork. Don't leave the device when connected. Turn off the socket when it's not in use and before maintenance. Use only indoors. Don't let it be used as a toy. Close attention is needed when used by children or near them. Do not use for any purpose other than the user described in this Guide. Use only the manufacturer's recommended attachments. Do not use with a damaged cord or fork. If the device does not work as it should, or has been dumped, damaged, left outdoors or dumped in the water, it has been repaired in an authorized service center. Do not pull or carry a cord, use the cord as a handle, close the door on the cord or pull the cord over sharp edges or corners. Don't run the device through the cord. Keep the cord away from heated surfaces. Don't turn off by pulling on the cord. To disable, grab the plug, not the cord. Do not treat the fork or appliance with wet hands. Don't put any object in open INGS. Do not use with any locked hole; Keep the holes free of dust, lint, hair, and anything that can reduce the flow of air. Keep your hair, loose clothes, fingers and all body parts away from holes and moving parts. Use extra caution when cleaning up the stairs. Do not use them to select flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) and do not use them in areas where they may be present. Do not use the device in a confined space filled with vapors, are allocated by an oil base of paint, paint thinner, some moths checking substances, flammable dust, or other explosive or toxic fumes.) Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.). Do not pick anything burning or smoking, for example, cigarettes, matches or hot ashes. - Use only BISSELL detergents designed to be used with this device to prevent damage to internal components. Section Fluid Cleaning of this guide. Don't dive. Use only on surfaces soaked by the cleaning process. Keep the device on the surface. Do not wear the device while you use it. Always install the float before any wet pickup operation. Do not wear the device while you use it. This model is only used for households. Commercial use of this unit annuities annuities Guarantee. WARNING Injury risk. The brush can start unexpectedly. Turn off before cleaning or maintenance. NOTE: STORE THE CLEANER IN A PROTECTED, DRY AREA. SINCE THIS PRODUCT USES WATER, IT SHOULD NOT BE STORED WHERE THERE IS A WARNING ABOUT THE DANGER OF FREEZING. THE FREEZE WILL DAMAGE THE INTERNAL COMPONENTS AND VOID THE WARRANTY. To reduce the risk of injury from moving parts - turn off before maintenance. WARNING The wrong connection of the equipment ground conductor can lead to the risk of electric shock. Contact a qualified electrician or service person if you are not sure that the outlet is properly grounded. DON'T CHANGE THE FORK. If it does not fit the socket, have a proper exit installed by a qualified electrician. This instrument is designed for use on a nominal 120-volt chain, and has a grounding fastening plug that looks like a fork in the illustration. Make sure the device is connected to an outlet with the same configuration as the plug. No plug-in adapter should be used with this device. GROUNDING INSTRUCTIONS This device must be connected to a grounded wiring system. If it is to fail or break, grounding provides a safe path of least resistance to electric current, reducing the risk of electric shock. The cord for this device has a grounding conductor and a ground plug. It should only be connected to an outlet that is properly installed and grounded in accordance with all local codes and regulations. Grounded Outlet Grounding Pin SAVE FOR FUTURE THESE INSTRUCTIONS USE Thanks for buying BISSELL CrossWave® Pet Pro We Love To Clean and we're excited to share one of our innovative products with you. We want to make sure that your multi-surface cleaner works as well within two years as it happens today, so this guide has tips on using (pages 6-8), maintaining (pages 9-13), and if there is a problem fixing problems (page 14). Your multi-surface clean needs a bit of assembly before you can put it to work, so turn it over to page 5 and let's get started! What's in the box? Safety instructions... 2 Product view.... 4 Meeting 5 Formula Cleaning... 5 Operations 6-8 Rinse and Storage Tray Multi-Surface Brush Roll Drying Cup Multi-Surface Pet Body Tangle-Free Tray with Rinse Brush Roll Funnel with Febreze®

Formula NOTE: Standard accessories can vary depending on the model. Maintenance and care 9-13 неполадок... 14 Гарантия 15 Служба 15
Регистрация продукции... 16 BISSELL.com 3 Знакомство с CrossWave® Pet Pro 1 2 9 10 11 6 12 3 7 4 5 8 1 Верхняя ручка 2 SmartClean Fingerprint Controls 3 Strainer 4 Float Stack 5 Easy Remove Brush Window 6 Integrated Carry Carry 7 Dirty Water Tank Your BISSELL CrossWave® Pet Pro Machine comes in three easy-to-assemble components and doesn't require any tools to assemble. The device also comes with a three-piece rinse and storage tray. 13 14 8 Foot 9 Solution Spray Trigger 10 Fast Release Cord Wrap 11 Pure Water Tank 12 Lower Cord Wrapper 13 Rinse Cup 1 BISSELL.com 4 Rinse and® Storage Tray 1 Insert Handle into the case of 2 units until you hear the click. Then, at the back of the machine, 3 align the clean water tank with the click of the groove and slide the tank into place until you hear the click. Wrap the cord around a quick release cord wrapper and lower cord wrapper. 4 Multifunctional Rinse and Store Tray includes a tray to store the machine, brush the roll drying tray with a rinse funnel, and rinse the cup. To assemble, slide over to hang in the middle of the brush roll drying tray with rinse funnel down into the hole on the storage tray, which is indicated with arrows. Then place the rinse cup in the rinse funnel. NOTE: To easily unwrap the cord for use, simply turn the quick release cord to wrap down to remove the cord from the cord wrap. Cleaning Formula WARNING To reduce the risk of fire and electric shock due to damage to internal components, use only BISSELL cleaning fluids designed for use with a hard floor device. Keep a lot of CrossWave® CROSSWAVE® formula formulas at hand, so you can clean your hard floors and carpet area when it fits your schedule. Always use crossWave ® in your car. Other decisions can harm the car and void the warranty. Multi-Surface Wooden Floor Formula Multi-Surface Area Rug Formula Pet with Febreze Formula Great to clean all sealed floors and floor floors Restoring your natural wood shine and removes from the built-in area of stuck dirt carpets on removes pet odors for cleaning and updating BISSELL.com 5 Filling your clean water Tank 1 2 3 Clean Water Tank located on the back of the machine. Clean Water Tank unscrew the lid from the tank with clean water. The Clean Water Tank has two measurement volumes depending on the amount of Dirty Water Tank Lift clean water tank straight up to remove from the space you would like to clean. Machine. 4For cleaning a large area (up to 700 sq.m) for cleaning a small area (lt:350 sq.m. Fill the formula of a tank with warm tap water to. Fill the formula tank with warm tap water to the second line of water filling, the first line of water filling. B. Then add the formula to the second formula b. Then add the formula to the first fill formula. Line. 5 6 At the back of the machine, level the clean water tank with grooves and slide the tank into place until you hear the click. Screw the lid back on a tank for clean water. A few notes on filling the clean water tank: Fill warm (140 degrees Fahrenheit/60 degrees Celsius MAX) with tap water and add the appropriate BISSELL or TANK solution. IN THE MICROWAVE. DO NOT USE BOILING WATER. NOT HEAT WATER BISSELL.com 6 Hard Floor Cleaning 12 3 Choose Cleaning Mode: To start cleaning hard floors, turn on the machine at the click of the HARD FLOOR button. Once the option is selected, the dry vacuum recline the body machine is back to start the roll brush spinning. To stop the roll of the brush spinning, you will need to stand the machine upright. Connect the machine to a properly grounded socket. Include. To turn off off off, click hard FLOOR settings a second time. The roll of the brush rotates. To stop the roll of the brush spinning, you will need to stand the machine upright. The roll of the brush rotates. To stop the roll of the brush spinning, you will need to stand the machine upright. 4 5 6 Before each use, hold the trigger solution for 10 seconds to prime the system with a cleaning solution. LED lights illuminate the trigger when carrying the trigger. NOTE: When the solution flows, you will see bubbles forming around the edges of the window roll brush. To clean, hold the spray spray solution to apply the solution both on forward and back passes. To dry the hard floors faster, release the trigger and clean the second passage without dosing the solution. To dry the hard floors faster, release the trigger and clean the second passage without dosing the solution. TIP: Roll looks when dirty, cleaning use excessively Easy Clean Dirty Storage or Dirty Tray hard to rinse the floors or brush if your roll brushes before cleaning your carpet area. TIP: For overly sophisticated and stuck on the dining rooms on dry hard floors, activate RUG passes while holding and hold the CrossWave trigger® allows the multicolorated Pet Pro over the brush cluster. Go Using to Work. Short BISSELL.com 7 Cleaning Area Rugs NOTE: colorfastness. Before cleaning Also, please check the area of the carpets, testing the manufacturer's inconspicuous tag before the area cleaning the carpet area for carpets for any specialized cleaning instructions. Not for use on silk or delicate area mats. 1 2 3 Choose cleaning mode: To start cleaning the carpets, turn on the machine at the click of the RUG button. Once the option is selected, the dry vacuum will turn the Recline body machine back to start the roll brush spinning. Connect the car to the on. To turn off off off, click RUG to properly ground the setting a second time. Output. Before each use The solution trigger for 10 seconds to prime the system using a cleaning solution. LED lights illuminate the trigger when carrying the trigger. NOTE: When the solution flows, you will see bubbles forming around the edges of the window roll brush. NOTE: RUG button doubles THE SOLUTION OF HARD FLOOR FLOOR to help with the cleaning of the area rug. To stop the roll of the brush spinning, you will need to stand the machine upright. 4 5 6 To clean, hold the spray solution trigger to apply the solution both on forward and back passes. WARNING Not over the wet carpet. Be careful not to run over loose objects or edges of the carpet area. Stopping the brush can cause the belt to fail prematurely. To dry the area mats faster, release the trigger and clean the second passage without dosing the solution. BISSELL.com 8 Service: Rinse and store Tray WARNING To reduce the risk of fire, electric shock or injury, turn off the power off and disable the plug from the electrical outlet before performing maintenance or troubleshooting. 1 2 3 Place units on the rinse and storage tray. Pour the water into the rinse funnel to fill the MAX rinse line and store the tray. Fill the cup with water. 4 5 6 Turn on the ON machine by clicking the Hard Floor button. Grasp the window roll brush in front of the window and pull up to remove. Discard the machine while storing the tray. Allow the machine to run for 10-15 seconds until all the water is picked up. Repeat as needed. Discard the machine while storing the tray. Allow the machine to run for 10-15 seconds until all the water is picked up. Repeat as needed. 7 8 Pull the brush to roll out, grabbing the brush roll tab and pulling up. Place the brush roll vertically in a Roll Dry Tray brush to dry. BISSELL.com 9 Maintenance: Rinse and store Tray (cont.) WARNING To reduce the risk of fire, electric shock or injury, turn off the power off and disable the plug from the electrical outlet before performing maintenance or troubleshooting. 9In addition to having to brush the roll of the window, first line up the tabs of the brush window with the edges of the foot. Then click on the window back in place until you hear a click. Machine storage Put the device away in a closet or basement before the next use. The store cleaner should not be protected stored where the area is dry. Because there is a danger of this product freezing, uses water freezing, it will damage the internal components and can void the warranty. NOTE: Any solution left in the clean water tank must be cleaned before the machine is stored. Replace the brush roll with a brush roll inserted to the right side of the foot. Then lock the tab to pull into place by clicking down. 10 BISSELL.com 10 Service: Dirty Water Tank WARNING To reduce the risk of fire, electric shock or injury, turn off power off and disable the plug from the electrical outlet before performing maintenance or Problems. 1 2 3 To release the dirty water Grab the front handle while the tank, press down on the press button and sunk the button to pull the dirty water tank from the top of the dirty tank. Units. You knew? The float tank is full, this is what the float prevents you from disconnecting your dirty suction tank from the overcrowded engine. Creation When High Smashed Your Dirty Dirty Pointing out that it's time to clean your dirty water tank. 4 5 6 Hands wash the vacuum filter and screen with warm water and soft detergent. Take the top of the dirty water tank in the recessed areas on each side of the filter and pull up to remove the top of the tank. Pour in the dirty water. Rinse inside a dirty water tank. Remove the filter from the strainer Remove from the dirty top of the dirty water tank pot then throw the trash into the trash, pulling it up. Rinse the float at the bottom of the top of the dirty water tank. BISSELL.com 11 Service: Dirty Water Tank (cont.) WARNING To reduce the risk of fire, electric shock or injury, turn off the power off and turn off the plug from the electrical outlet before performing maintenance or troubleshooting.9 1114 Corner mud tank back into the body of the machine inserts the bottom first. Then tilt the Place strainer back into the dirty water tank. 10 If the inner area where the dirty water tank sits is dirty, wipe it with a clean cloth or towel. Top of the dirt tank to the car and click on the place until you hear the click. Leave the parts to dry before placing the vacuum filter back to the assembly. on top of a dirty water tank. NOTE: Make sure to clean your dirty tank and let all the components dry up after each use to keep your product at its best. 12 13 Once the parts have dried, collect and replace the top of the dirty water tank. BISSELL.com 12 Service: Roll Brush and WARNING Cameras To reduce the risk of fire, electric shock or injury, turn off power off and disable the plug from the electrical outlet before performing maintenance or troubleshooting checks. Problem Possible Causes Remedies Reduced Spray or No Spray Clean Water Tank May Be Empty Refueling Tank System Not Fully Primed Hold Trigger for 10 to 15 Seconds Brush Window Not Latch on place Turn Power Off OFF Turn off the machine and re-install the brush box Clean water tank can not sit completely Turn power off / Remove and reseal the tank Without holding the trigger to spray the solution Keep the trigger continuously when using the machine Spray tips on the leg clogged Using pins to clean spray tips, Located under the brush roll window Loss Suction Force Dirty tank took the maximum amount of dirty water and reached the full line of Empty Dirty Tank and make sure to do slow cleaning passes and forward while cleaning the Empty Dirty Tank and make sure that make the slow cleaning goes back and forth while cleaning the brush box does not latch on to the place of turn power off / Unplug machines and re-install the window can not be installed So that they match properly the garbage channel in the leg clogged Clean Channel with a paper towel filter clogged with garbage filter screen and clean filter brush roll does not turn the machine stands upright Recline machine to make the brush roll to turn the roll brush is not installed properly Turn the Power Off / Turn off the machine and follow the instructions on page 11 to replace the brush roll hurdle caused the roll of the brush, To stop turn the power off/ Disable the machine and remove the brush roll cleaning the hair and string from the end of the brush machine will not be until the machine is disconnected, remove the brush window and brush the roll cleaning the hair and the string from the brush ends the handle is not inserted properly into the body of the machine Remove the handle and re-insert into the body of the machine making sure to press down until you hear the press remove the handle and re-insert into the body of the machine To push down until you hear click Machine leaks Clean Water Tank cover is not closed properly Remove clean water tank and re apply cover Remove clean water tank and re apply lid machine strips Too much water applied Go area without spraying down water Previous floor care products used by Contact Product Manufacturer on whether How to remove BISSELL.com 14 Guarantee This warranty gives you specific legal rights, BISSELL NOT LIABLE FOR INCIDENTAL OR, and you can also have other rights that can CONSEQUENTIAL DAMAGES of any NATURE vary from state to state. If you need additional ASSOCIATED WITH USE THIS PRODUCT, instructions regarding this warranty or BISSELL'S LIABILITY WILL NOT exceed questions as to what it may cover, please PURCHASE PRICE OF THE PRODUCT. contact BISSELL Consumer Care by email or phone as described below. Some states do not allow exceptions or restrictions on accidental or indirect damages limited to a five-year warranty for EXCEPTIONS AND EXCLUSIONS Receiving a BISSELL product will be repaired or replaced (with new, repaired, lightly used or restored components or products), at BISSELL option, free of charge from the original buyer's purchase date, for five years of any defective or faulty part. See the information below on If your BISSELL product should require maintenance. so the above restriction or exception may not apply to you. EXCEPTIONS AND EXCEPTIONS TO THE TERMS OF THE LIMITED GUARANTEE THIS GUARANTEE IS EXCEPTIONAL AND INSTEAD OF ANY OTHER GUARANTEES, ORAL OR WRITTEN. ANY IMPLIED WARRANTIES, WHICH MAY BE USED BY OPERATION ACT, INCLUDING IMPLIED WARRANTIES MERCHANTABILITY AND FITNESS FOR A SPECIFIC PURPOSE, ARE LIMITED TO THE FIVE YEAR DURATION FROM THE DATE OF THIS warranty applies to the product used FOR PURCHASE AS DESCRIBED ABOVE. personal, not commercial or rental services. This warranty does not apply to fans or normal service components such as filters, belts or brushes. Damage or malfunction caused by some states does not allow for restrictions on how long the implied warranty lasts, so the above restriction may not apply to you. negligence, abuse, neglect, unauthorized repair or any other use, not in accordance with the User's Guide, is not covered. This warranty will only be valid if the product is used in the same country in which it was sold. NOTE: Please keep the original sales receipts. It provides proof of the date of purchase in the case of a claim for a guarantee. Service If your BISSELL product should require service: Contact BISSELL Consumer Care to find the BISSELL Authorized Service Center in your area. If you need information about repairing or replacing parts, or if you have questions about your warranty, please contact BISSELL Consumer Care. Web-BISSELL.com/service-centers by email: BISSELL.com/email-us Please do not return this product to the store. Other maintenance by an authorized or service service did not include a representative. The guide should be to contact any questions us directly or on issues, 1-800-237-7691. BISSELL is happy to be serviceable. Call: BISSELL Consumer Care 1-800-237-7691 Monday - Friday 8am - 10pm ET Saturday 9am - 8pm ET Sunday 10am - 7pm ET BISSELL.com 15 16 Register your product today! Registration is fast, easy and offers you benefits throughout the life of your product. You'll get POINTS BISSELL automatically earn points for discounts and free shipping on future purchases. A faster service providing your information now saves you time if you need with us with questions regarding your product. Reminders of food support visit BISSELL.com/registration! Visit us online on BISSELL.com when contacted by BISSELL, there is a model room cleaner available. Please dial your model number: - We hear can't wait for you! Please make a purchase We do read your comments, tweets, NOTE: Please keep your initial sales check. It provides proof of the date of purchase in the case of a claim for a guarantee. See the Guarantee page for more details, and positions. Rate this product BISSELL.com or any of our retail sites and let us (and millions of your closest friends) know what you think! To clean up tips and more BISSELL.com or find us on: BISSELL and Alerts We will contact you with any important product service recall-ers and alerts. Special Promotions Extra: Register your email to get notification of offers, contests, cleaning tips and more! Parts and materials for parts and accessories, go BISSELL.com and enter your model number in the search box. BISSELLClean BISSELLClean BISSELL BISSELL ©2017 BISSELL Homecare, Inc. Grand Rapids, Michigan All Rights Reserved. Printed in China Part 161-3994 11/17 Rev8 Visit our website by: BISSELL.com FREE INGLISH PDF OPERATING AND INSTRUCTIONS USER GUIDE - MANUAL OWNER GUIDE - OWNER MANUAL REFERENCE GUIDE - REFERENCE MANUAL INSTRUCTION GUIDE - SOURCE INSTRUCTION GUIDE

normal_5f88b9d1108b6.pdf
normal_5f876f2ccb06d.pdf
normal_5f87392a843d7.pdf
crook.pdf replacement stoneware 6 quart
dominican university nursing transfer guide
fluid mechanics hibbeler solution manual
pathfinder.ustalav.pdf
lfx25973st user manual
el_feroz_cabecilla.pdf
factoring polynomials.pdf
frp_bypass.apk.8.0
affairscloud weekly.pdf.in.hindi
marguerite.yourcena.r.livres.pdf
breathing exercises.pdf anxiety
67174428059.pdf
javnulliewozi.pdf
football_live_channel.apk.pdf
88234362643.pdf