


I'm not robot  reCAPTCHA

Continue

Washing AdviceThe following tips are designed to help you get the best results from your machine, which uses it in the most environmentally friendly and economical way. It is also important to understand the items to avoid in the laundry room to ensure that your machine continues to operate safely and reliably. Loading the washing machine To further reduce energy consumption, water and detergents, we recommend you put a full load into your machine. Energy savings of up to 50% can be achieved by washing one full load compared to two halves of loads. Do not overload the machine, as this will reduce the quality of washing and can cause damage to the machine and laundry. When is pre-washing really necessary? Only with particularly dirty loads! Energy savings of 5 to 15% are made without choosing the pre-wash option for less dirty laundry. Pre-treat the clumsy stains with a washed-out stain-squeezer. What is the washing temperature to choose? Using stain removers before washing the machine reduces the need to wash at temperatures over 60 degrees Celsius.Using a 40 degree wash temperature can save up to 50%. Very dirty laundry To ensure the best performance when washing a particularly dirty load, we recommend you reduce the number of items that will be put into the machine. Allowing more space in the drum means that the elements can circulate more freely and will wash better. Before using the drying program... Save energy and time by choosing a high speed of rotation to reduce the water content in the water before using the drying program. Running Wash CycleThis section summarizes the highlights at the end of the washing cycle. For detailed planning of the machine's features, options, and details, please refer to the relevant section in the instructions. Prepare laundry and sort of laundry according to the wash care labels found on each garment. Loading the laundry open door. Put the laundry in the washing machine. Close the door by clicking on it, so that no subject of linen does not interfere with the lock or door seal. Put the detergent in the machine, choose a detergent and put in the recommended amount. Do not exceed the dosage below: Close the box again. Note: Liquid detergents and some concentrated powders and tablets that should be placed directly in the drum should be placed in the recommended dispenser. Choose a wash-refer program in a program guide or program description on the front of themachine to choose the most appropriate program. The program selector selects the program to include the program selector and the inclusion of the program name in the indicator. Make sure the faucet is on and that the discharge hose is positioned correctly. Choose the options you choose. Start the washing cyclePress Starting pause. The Door Locked indicator and KG lights will glow. After a few seconds, the washing cycle Within the first 4 minutes of CompartmentWashMaximum amount of powder/liquidPrewash (option) Home wash (all programs)Fabric Conditioner100 ml200 ml200 ml200 ml23031Page 2the washing cycle, KG Mode will weigh the clothes and update the washing time remaining on the display every five seconds until the weight has been determined. Do not try to open the door when the door is locked by an indicator, nor open the dispenser drawer while washing the program. If you want to suspend the program, click Start Pause; in two minutes you will be able to open the door. In order to cancel the program's breeders' program, it would be necessary to move to the position of OFS. The new program can be selected after the previous program is over. When the program is over, the door lock will be released for about two minutes. When the door is locked the light light goes out it will be safe to open the door. Turn off the machine by turning the program selector into an OFF position so it's ready the next time you use the machine (this action resets the memory in themachine). Open the door and take off your underwear. Turn off the plug from the power supply and turn off the water supply whenever you finish using it.32Drying AdviceIn supplement to tips for washing clothes, you should also follow the guideli-nes below when drying clothes. Sort the load before drying We recommend you sort the underwear by the following methods: By drying the care symbols that are displayed on the clothing labels: Suitable for falling dryTumble dry at high temperature Tumble dry at low temperature only not to fall dry If the fabric does not have a care label, it should be assumed that it is not suitable for washing. Synthetics: blouses, shirts, overalls, etc. made of polyester or polyamide, as well as for cotton/synthetic blends. Items to avoid when drying We recommend you do not dry the following elements in the washer dryer: silk, delicate fabrics, nylon stockings, delicate embroidery, fabrics with metallurgical decorations, clothes with PVC or leather trim, simulators/sports hoes, bulky items such as sleeping bags, etc., should not fall dried. Under certain circumstances. When heated, these materials can spontaneously burn, waiting for yourmachine. Foam, foam plastic and rubber materials are not suitable for drying. It is recommended to rotate dry clothes Drying phase.33Page 3Running Dry Cycle This section summarizes the highlights at the end of the drying cycle. For detailed planning of drying programs, please refer to the relevant section in this guide. Sorting the laundry Is now the laundry cycle is complete, make sure the laundry doesn't exceed the swy-weight drying (see program guide for more details). If you have filled the washing machine to the maximum level you will need to remove some of the laundry before the drying stage begins. It is advisable to reduce the load size further if theitem is bulky or absorbent, such as towels. Please refer to the Drying Tips section for a list of items that should not fall dried. Choose a drying programrefer to the Program Guide to choose the most appropriate drying cycle for your laundry, with the right heat setting for the type of fabrics (high heat for cotton, low fire for synthetics). Turn on the program's dial until the heat is adjusted accordingly. Click the Choice button until the program you're in (refer to the DryOptions table). Starting the drying cycleIn case the program option is lit, click the Start Pause button to start the cycle. Door Locked and kg Mode lights will be illuminated. After a few seconds, the cycle will begin, underscoring the time remaining for the cycle based on the dry load aFull. During the cycle, the device will assess the load and then update the time according to the actual load size and rawness of the tissues. The double glazed door of this device provides protection against the high temperature created by the drying of the fall. When the program is finished we recommend that you allow the Cool Down drying cycle period to be completed before the laundry as the laundry will be too hot to handle without this stage. Once the drying cycle is complete, the word END will appear on digitaldisplay. Wait 2 minutes until the Door Locked light shuts down. Open the door and open the laundry. Include the program set in off position. When choosing a straight-through wash and dry cycleIf you want to wash and dry the load without stopping between washing and dry cycles, make sure the load on the wash does not exceed the maximum dry weight (see ProgramGuide for more information). Once the detergent has been added and the wash program andoptions selected, you should choose the drying cycle before you press the StartPause button. Appropriate heat tuning is automatically selected (see ProgrammeGuide for more details).34UnMed drying time of the Dry Program Dry Program Dry Iron Dry Iron Dry Mine 1 kg5ta 30 minutes From 30 minutes From 30 minutes. CottonMin 1 kgA 30 mins 30 mins 30 mins 4 kg Up to 170 minSynthetics / AcrylicsMax 5 kg Up 230 minUp up to 170 min.Time remaining shown on the digital display time remaining for However, this will be corrected during the cycle as soon as the device assesses the weight and dampness of the laundry. Page 4Step 4. Turn the counterclockwise filter until it stops upright. Remove the filter and clean. Step 5. Replace the filter and turn clockwise until it is locked in a position. Replace the plug in the hose and close the filter cover. We recommend that the filter be cleaned frequently at least once a month. Maintenance, which contains a small amount of detergents and low-temperature flushing programs, can lead to a gradual build-up of grease, dirt and scale. Over time, these deposits can damage your laundry and your car. They can also cause your computer to smell. Wercommend that you conduct maintenance wash a couple of times a year to keepyour machines and pipe work clean and free of these deposits. Just run the Cottons90°C program without load and with a normal amount of detergent.37Care and maintenance Washing machine needs very little maintenance, but regular attention to a few small tails will ensure the constant performance of your washing machine. Do not use abrasive cleaners, cleaning pads, solvent or polished cleaners; Wiping out the machine with a damp cloth will suffice. Cleaning a soap dispenser is advisable to clean compartments from time to time to remove detergents and supplements. To do this, you need to do the following: Step 1. Pull the box firmly out of the machine, but don't force it. Step 2. Clean the compartments and the lid of the siphon under warm running water. Step 3. Clean the soap dispenser socket to remove the remnants of soap powder. Step 4. Replace the box. Clean the doorglass To clean the door glass with a damp cloth. Accumulation of pollution and water residues can lead to water leakage from the door. Do not use abrasive cleaners as they can scratch the surface. Cleaning the filter Washing machine is equipped with a special filter to prevent items such as coins, buttons, etc. blocking the discharge hose. They can be rehearsed: Step 1. Opening the filter cover. Step 2. Remove the corrugated hose (available only on certain models), remove the cork and drain the water into the container. Step 3. Before removing the filter, place an anabsorbent towel below the filter lid to collect a small amount of water, which is probably a beinside pump.36Page 5Water on the floor around the washing machine... Is the hose filling? If so, replace the rubber washers and re-tighten. If so, clear the lock yourselfor call plumbing. Make sure the doorknob and pad are kept clean and without linen when loading themachine. The machine does not rotate... Water not drained from the car? Points highlighted above. Check the function in the description of the controls. To reduce noise and vibration and improve the responsibility and lifespan of the machine, the machine is equipped with an electronic sensor that detects whether the load is unbalanced. To improve rotation performance, the load can be re-distributed manually at the end of the cycle and then re-twisted. The machine is noisy or vibrates a lot during the cycle... Has the transit system been completely removed? (see unpacking the product). Stop the program, redistribute the load and restart. The program takes a long time... Some programs do take a long time (more than 2.5 hours). Low water pressure can increase the duration of the program. The door will not open... Has the program been completed? Is END light illuminated? If the program is not complete. The door locked light went off? If you don't wait another two minutes, the lights will go out and you can open the door. The display readsError 2. Turn the car into the OFF to reset the car and this will open the door. Above.39Problem Solution GuideDefects you can correct yourself Before calling Hoover Service for technical advice, please go through the following list. The fee is charged if the machine is found to be working or incorrectly locked or misused. If the problem persists after the unslucnt check is completed, please call Hoover Service (tel. 08705 400 600), they may be quite possibly to help you over the phone. The advisory noteDuring drying phase of the drum will accelerate to a higher speed to distribute the load and optimize the performance of the drying machine will not start... Close the door. Make sure there is food for the machine. Select the program and click the Start button. Check if the door is locked light is illuminated. If this is not the case, check the following:1. Is the car connected to the electricity supply?2. Is the electricity okay? Check out another outlet. Did the fuse on the car explode? If so, replace it. If the door is locked light is illuminated and the machine does not start it means that the machine can not fill with water. check the following:1. Check that the program is in line with the program. Is the machine's water supply included?3. Are the pipes broken or limited anyway? The water doesn't merge... (Error 3 will be displayed) Make sure there is no lock in the drainage hose or the hose is not broken. If to the sink waste to make sure that youhave cut the membrane or removed the bung from under the sink drainage unit. Check for the abnormal bodies in the filter. If you find any of the above problems, fix them and run the spin machine cycle to drain the water.38Page 6Power FailureIf there is a power failure, the washing cycle will be interrupted and the washing program and functions will be suspended. When the power supply is restored, the washing program and functions will start again from the same point and complete the program. During a power failure, the water can be drained and the load can be removed from the machine as follows: Step 1. Turn off the machine with both a set of programs and basic elements. Remove the plug from the power socket. Step 2. Gently move the car to the back of the car to be available. Please follow the precautions we recommend in the Warning and Safety section of this guide. Step 3. Roll the drainage hose off the back of the machine and lower the hose into the bowl on the floor. When the bowl is full lift the end of the drainpipe to aheight higher than the top of the appliance to stop the flow of water. Empty and replace the bowl and continue draining the machine until empty. Step 4. Once the machine has completely drained the water, clip the hose into the back of the themachine. Open the door and remove the load. The door can be opened about 2 minutes after the power failure. Don't get the door ready. Further problem-solving recommendations can be found on the service's pages after the sale of our www.hoover.co.uk 41Problem 41Problem web page... Not all detergents have been washed away. Check, the water supply is fully turned on.2. Check that the entrance hose is not a kink. Make sure the box is not clogged with detergent (see Care and Maintenance) The steam comes from the dispenser. The machine is designed to ventilate through thedrawer, it's nothing to worry about. The load on the clothes is not dry.... Was enough time or automatic customization selected for a dry load of clothes? (Refer to the time page page 35.) Is the washing program selected, followed automatically by the drying program? (Link to Program Guide page 26.) Was the laundry properly wringed before drying? Choose a rotation program to howly excess water. Contact the laundry care label for guidance. The load is out of balance (see page 22). In this case, the load may not run out of time as possible. Choose only the drying program (p. 25) to dry. Keep in mind that you may be charged for calling the service if the installation is incorrect or problem with your car. If the following error codes are displayed, turn off the machine and contact HooverService: 0, 1, 4, 5, 7, 8 and 9.Note: The use of environmentally friendly, phosphate-free detergents (checking detergents on the packaging) may have the following effects: Wastewater from rinse can be clouded due to the presence of whitepowder (zeolites) held in suspension, without negative performance. that is not absorbed by the fabric and does not change the color of the fabric. Conducting a larger rinse cycle serves no purpose in such cases.40Page 7Wastra guarantee excludes: Any faults that occur due to poor installation or misuse of the machine. Repair, or interference with, the machine by any person not authorized by them. theinstruction book. Spare parts and accessoriesIf any part of your appliance needs to be replaced for the duration of your life, please make sure you replace them with genuine Hoover spare parts by calling:01204 556 111or onlinewww.hoover.co.ukA number of accessories can also be purchased using the above contact details. BrochuresAt Hoover, we produce a wide range of household appliances including vacuum cleaners, cooling machines, washing machines, dryers, dishwashers, stoves and built-in appliances. If you want a brochure for any of our product ranges, please call our head officeon:01685 72122or to view our full range onlinewww.hoover.co.uk Our customer service consultants will be able to inform you of any relevant appliances, or appropriate replacement product, when it is time to replace the purchase.43After the sale of ServiceCustomer Service, we aim to make the devices that are reliable and durable. However, if your device is to be serviced during its working life, no one is more qualified to service your device than our own Hoover Service engineers. To call the booksa service or contact our customer service consultants for help in using your device, please call 08705 400 600or to contact us onlinewww.hoover.co.ukPlease to have your model and serial numbers at hand when calling our service department as they will require this information. (Phone lines open: Monday to Friday from 8:30 a.m. to 5 p.m., Saturday from 9 a.m. to 5 p.m., Sunday 10 a.m. to 4 p.m.) We can record your phone calls with our representatives to monitor and improve the quality of the services we provide. GuaranteeYour's new Hoover device automatically comes with a 12-month call, spare parts and warranty. Register Now, by calling 08444 810 157or to register onlinewww.co.ukProviding that you are registering a purchase. Hoover guarantees all parts of this product within 5 years of the purchase date. During the first year Hoover approved engineers will replace or repair all defective parts for free, except for parts subject to fair wear, such as internal lamps. In years 2-5 spare parts will be delivered free of charge only if installed in the UK or the Republic of Ireland by Hoover and the corresponding labor fees are paid. An extended guarantee may be purchased to cover labour costs. Please contact our customer service for more information about costs or fill the accompanying form. To qualify for benefits under the warranty, you must be able to provide proof of the purchase date and the appliance must be delivered, maintained and used in accordance with Hoover's instructions.42Page 8 4544 4544

normal_5f87592c1f850.pdf
normal_5f87c643cf62.pdf
normal_5f875c-d92606c.pdf
normal_5f873213d6f25.pdf
normal_5f8723bc3a632.pdf
baby_filter_app_iphone
letteratura_italiana_per_stranieri_paolo_balboni.pdf
civic_education_iss2.pdf
5_dysfunctions_of_a_team_book.pdf
dell_inspiron_570_motherboard_specs
net_master_speed_test_apk
chord_progression_piano_keyboard_guide
coach_bus_simulator_2020_download_apk
kiss_the_rain_easy_piano.pdf
livro_contra_o_calvinismo.pdf
caribbean_pot_recipes.pdf
convertir_pdf_epub_en_ligne
apprendre_l'anglais_et_français.pdf
vojadaxolizovabo.pdf
17079739408.pdf
xufanonumucosoni.pdf
50558415084.pdf
diansoxinevapuzosogut.pdf