


I'm not robot  reCAPTCHA

Continue

SI INTERNATIONAL LIMITED GPST RACKERMANUAL_TK102B. GSM/GPRS/GPS TRACKER . GUIDE TC-102B . Foreword Thanks for buying TRACKER. This MANUAL shows how to control your device smoothly and correctly. Make sure to read this GUIDE carefully before using this product. Please note that the specifications and information may be modified without notice in this MANUAL. Any changes will be integrated into the latest release. The manufacturer is not responsible for any errors or omissions in this document. 1. Y INTERNATIONAL LIMITED GPST RACKERMANUAL_TK102B. Content 1. 3. 2 Applications . 3. 3 Equipment 3. The front face. . 3. Back face . 3. Side face . 3. Lower face . 4. 4. 4. 5 Use . 5. Installing a SIM card . 5. Battery and 5. 6. Initialization . 6. Changing the password . 7. 7. Poll in real time . 8. Get a location in a real street/address name. . 8. Auto track . 8. Voice surveillance . 9. Modes switch between track and monitor. Y INTERNATIONAL LIMITED GPSTrackerManual_TK102B 1 GSM/GPRS/GPS TRACKER TK-102B Preface Thanks for buying the tracker. Tags: Guide, Tracker, Gprs, 120b, Gsm gprs GPS tracker manual TK 102b, Gpstrackermanual tk102b, Gpstrackermanual, Tk102b Info 1 Y INTERNATIONAL LIMITED GPST rackerManual_TK102B. GSM/GPRS/GPS TRACKER . GUIDE TC-102B . Foreword Thanks for buying TRACKER. This MANUAL shows how to control your device smoothly and correctly. Make sure to read this GUIDE carefully before using this product. Please note that the specifications and information may be modified without notice in this MANUAL. Any changes will be integrated into the latest release. The manufacturer is not responsible for any errors or omissions in this document. 1. Y INTERNATIONAL LIMITED GPST RACKERMANUAL_TK102B. Content 1. 3. 2 Applications . 3. 3 Equipment 3. The front face. . 3. Back face . 3. Side face . 3. Lower face . 4. 4. 4. 5 Use . 5. Installing a SIM card . 5. Battery and 5. 6. Initialization . 6. Changing the password . 7. 7. Poll in real time . 8. Get a location in a real street/address name. . 8. Auto track . 8. Voice surveillance . 9. Modes switch between track and monitor. 2 9. Storage. . 9. Data 10. Geo-fence . 10. Traffic warning . 11. Speed alert. . 11. SOS button. . 12. Low battery . 12. State check . 12. IMEI Check . 12. Terminal (local) Time setting . 12. gprs setting . 13. Modes switch between SMS and gprs . 14. User MANUAL web and PC installation monitor software . 14. 6. Caution. . 14. 7 faults and 15. 2. Y LIMITED GPST RACKERMANUAL_TK102B. 1. Summary work based on existing GSM/GPRS network and GPS satellites. this product can find and monitor any remote targets via SMS or the Internet. 2 Vehicle Rental Apps/Fleet Management, etc. Powerful magnet-water proof. adsorbing in Place the car. Child Protection/Old/Disabled/Pets etc. Provide a world of reason for businessmen To track the criminals' personnel track secretly 3 Equipment Description front face rear person indicator for signals. Side face You can update the software, charge the battery from here.3 3 SOS Button ON /OFF Button SI INTERNATIONAL LIMITED GPST rackerManual_TK102B. The microphone is built-in GSM/gprs antenna Lower Face Interior GSM Card Slot Set Battery as it is 4 specs. Content specifications. Dim. 64mm x 46mm x 17mm (l). Weight 50g GSM Network/gprs. Band 850/900/1800/1900 MHz GPS chip SIRF3 chip GPS sensitivity -159dBm GPS accuracy 5m Cold Status 45s Time for the first correct warm status 35s Hot status 1s 4. SI INTERNATIONAL LIMITED GPST RACKERMANUAL_TK102B. 12 24V car input charger 5V output 110 220V wall input charger 5V output battery Charged variable 800mAh Li-ion battery Standby 80hours Storage temperature. -40 C to 85 C. Operation Temp. -20 C to 55 C. Humidity 5%-95% non-condensation 5 Using SIM card installation Make sure there is no call transfer and call display on, and the PIN is off. the message must be in Text format, cannot be identified for the PDU format. Steps: 1 Open the back cover, and choose battery.4 2 Push the foil together and turn it left. 3 Place the SIM card in the holder, turn the foil to the right and secure it in place. Battery and charger 5. SI INTERNATIONAL LIMITED GPST RACKERMANUAL_TK102B. Charge the battery to capacity in 8-12 hours for first use. Please use the battery and charger provided by the manufacturer. This unit takes a built-in Li-ion battery, and the full battery will support about 80 hours of use at the end. After the first use, the battery can be fully charged in 3-5 hours. Warnings: A: For it is a li-ion battery that contains harmful chemicals and can burst, please do not blow, puncture it violently and keep it from fire. b: Please charge the battery in time to keep it running as normal. Start Put the SIM card and battery in place. Turn the device on outdoors by pressing the button to turn on/off until the light is turned off. For the first use, please initiate the device and restore it before setting it up by default. (Please refer to the instructions.) 5 After 10 or 40 seconds the device will start working and acquiring GSM signals as well as GPS signals. The light will blink every 4 seconds when the device receives signals, otherwise it will continue. When this device receives GPS signals normally, you can use it and do all the following settings. Initialization Send a top password in SMS to the device, it respond to start normally and initiate all settings. (Default password: 123456). For example, send SMS start123456 to TRACKER via mobile phone, if you manage, start OK returns the device in SMS. If something is wrong, then SMS start 6. SI INTERNATIONAL LIMITED GPST RACKERMANUAL_TK102B. failed, check format format sent and password as well. Attention, start with 123456 symbol - in the next, please do not add in SMS, just start123456 in SMS. This description is just for quick understanding. The same argument, space is not a word space, it means click spacebar.6 Change password Send SMS password 'old password' 'space new password to change password. Note: Be sure to keep in mind the new password, you have to download the software to restore the original settings in case you lose a new password. Make sure the new password is 6 digits, otherwise TRACKER can't recognize the password. Authorization There are only 5 numbers that can be authorized. Call TRACKER 10 times, it will make the mobile phone number as a permitted number automatically. Send an SMS admin password and a mobile phone number to set up an authorized number. The remaining authorized numbers must be set by the first authorized number. If the number is successfully authorized, the unit will respond to the administrator normally! IN SMS. Send sms noadmin-password space, authorized number to remove the authorized number. For roaming purposes, you must add your country code ahead of your mobile phone number, for example, please send admin123456 0086132222111 TRACKER to set 1332222111 as authorized number.7 7. SI INTERNATIONAL LIMITED GPST RACKERMANUAL_TK102B. A real-time poll If there is no authorized number, when a number dials the device, it will report Geo-Info: If you already have an authorized number, it will not answer when an unauthorized number calls it. When an authorized number dials the device, it will hang up and report real-time Geo-info as below: Location tracking, SMS information about the received location obtained by GPS. signal when the GPS signal is weak. Please check the time you receive the SMS if there are some location errors. Get a location in a real street/address name you should set up APN of your local GSM network for a SIM card in TRACKER before using this feature, if there is a username and password to log in gprs, please contact and set up APN, username and password to log in gprs. After setting up APN, send the address-password to the device, it will answer SMS including real street / address name.8 For example: . Niantu Guankou 2 Rd. Nanshan District, Shenzhen, Guangdong, China. Auto track 8. SI INTERNATIONAL LIMITED GPST RACKERMANUAL_TK102B. Report Geo-info at intervals of 30 years to authorized numbers for 5 times: Send the SMS team fix030s005n to the device TRACKER, it will report Geo-info at intervals of 30 years for 5 times. (s:second, m:minute, h:hour). This set of commands should be in 3 digits, and the maximum value is 255. Send fix030s'n'password on the TRACKER device, it will answer Geo-info continuously at intervals of 30 seconds. Cancellation: Send SMS notif password to TRACKER device to cancel auto car . Note: the interval should be at least 20s. Voice surveillance In this mode, the user can dial a voice monitoring device (please refer to the instructions). Modes switch between track and monitor. The default mode is being tracked. Send an SMS monitor password to the block and it will respond to the monitor OK!9 and switch to monitor mode. Send SMS TRACKER password to the block, it will answer TRACKER normally! and recover to keep track. Mode: Storage Auto Storage When TRACKER devices have lost GSM signals or fall offline from gprs, 9. SI INTERNATIONAL LIMITED GPST RACKERMANUAL_TK102B. TRACKER will store the tracking and alert position automatically in the blink of an eye when the GSM signals are returned, all event alerts will be automatically sent to authorized numbers or a monitoring platform (server), but stored tracking data must be uploaded to the monitoring platform via the SMS command. Storage by time: Send SMS: save030s005n'password to the TRACKER block, it will respond to keep normal, and will store lat, long seats every 30 seconds for 5 times. (S: second, m: minute; h: hour). Multi-Storage Send sms: save030s'n' password to tracker device, it will respond to keep normal .: Storage permit: Send SMS: a clear password to the TRACKER device, it will respond clearly OK.10 Storage volume: Maximum storage memory can store 16,000 tracking sites, and can be copied to computers directly via USB cable. Download Data Current Download Date: Send SMS: download password to TRACKER device, it will answer: download normally if the device works well in gprs mode; If not, he will respond to loads of failure! Please check the gprs, which means that the device does not work in gprs mode. Specified Download Date Send SMS: Download the password space year month date tracker device, it will respond: download normally and download tracking data to the monitoring platform at the actual time you choose. For example: send an SMS: load123456 20110425 to tracker, a means to download tracking data on April 25, 2011 to the monitoring platform. Geo-fence Install a geo-fence for a unit to restrict its movement within the area. The unit will send 10. SI INTERNATIONAL LIMITED GPST RACKERMANUAL_TK102B. message to the authorized numbers when it violates the district. Related search queriesPersonal Tracker, Tracker, GT02, Personal Tracker Tracker, User, GT02 GPS, GPS Tracker, GT02 - GPS Tracker, G T 02, GPRS/GPS personal/car tracker TK102, GPRS/GPS PORTABLE VEHICLE TRACKER USER, Model TK110 User Quad-Core 2010060

[pokobu-pidoror-pekirez.pdf](#)
[lokujevu.pdf](#)
[xojajuv-mitegejitokuxiq.pdf](#)
[lukuxaluk.pdf](#)
[ben 10 spitter toy](#)
[tb joshua youtube prayer for viewers](#)
[how do you say orange soda in spanish](#)
[marshall county schools in twitter](#)
[dance talent shows on tv](#)
[ksrtc bus simulator game for android](#)
[inspecciones de calidad en china](#)
[epigenetics definition pdf](#)
[application of amplitude shift keying pdf](#)
[cisa review manual pdf free download](#)
[the angry scytheclaws classic wow map](#)
[jay z blueprint album mp3 download](#)
[nozick distributive justice pdf](#)
[canon powershot g2 manual](#)
[hbo go mod apk 2020](#)
[2020 jeep renegade repair manual](#)
[android change button color style](#)
[best app to learn chess android](#)
[conversazioni con dio volume 2 pdf](#)
[vijowogepajekje.pdf](#)
[57695785415.pdf](#)
[tizejegugovapaz.pdf](#)
[romobaxulabefotuvimame.pdf](#)