


I'm not robot 
reCAPTCHA

Continue

120 volts, 60 Hertz 1080 W, ETL Approved 2 English IMPORTANT PRECAUTIONS

3 ENGLISH IMPORTANT PRECAUTIONS 1. NEVER

immerse yourself in water. 2. NEVER use near water. 3. NEVER use an abrasive sponge or cloth. 4. NEVER use a cleaning pad on the appliance. 5. NEVER leave the device unattended while using it. 6. Disconnect the device from the socket when it is not in use and during cleaning. 7. DO NOT work with this device with a damaged cord plug, nor if the appliance is always malfunctioning. 8. DO NOT clean any parts of this device in the dishwasher. 9. Stay out of the reach of children. 10. This device is not toY. 11. Uncontrolled young children and persons with cognitive problems should never control this device. 12. Young children should be supervised in close proximity to the device so that they do not play with it. IMPORTANT SAFEGUARDS Basic precautions should always be taken when using electrical appliances, including the following: 1. Read all instructions before operating this device. 2. Do not touch hot surfaces. 3. To protect against electric shock, do not immerse the cord, fork or any part of this device in water or other liquids. 4. When using any device near children, close supervision is required. 5. Turn off the output when not in use, before removing the parts and before cleaning. 6. DO NOT work with any device with a damaged cord or fork, or if the device has been damaged in any way. Return the appliance to the nearest repair shop for Or repairs. 7. The manufacturer does not recommend the use of an attachment accessory. The use of attachment accessories can lead to injury. 8. DO NOT use outdoors. 9. Spread the device as close as possible to the socket to prevent injury due to the disconnection of the cord. 10. DO NOT leave the unit running after the popping has stopped. 11. When moving this device, you should be extremely careful. 12. DO NOT use the device for other than its intended use. 13. The device connected to the socket should not be left unattended during operation. 14. Check popping cameras for foreign objects before use. 16. Longer removable power cords can be used if they are cared for. 17. The electric extender rating should be at least as large as the electric rating of the device. 18. This device has a polarized fork (one blade is wider than the other). To reduce the risk of electric shock, this plug is designed to fit into a polarized socket in just one way. 19. Save these instructions! THANK YOU for buying VINTAGE COLLECTION™ HOT AIR POPCORN MAKER. This early 1900s style popcorn maker is a countertop-sized party pleaser. In just a few minutes, family and friends can enjoy the fresh taste of crispy hot popcorn! Its electrical system pops uses hot air instead of oil, producing light and healthy snacks. The device comes with a measuring cap that guarantees the proper number of cores used in each batch. It has a core capacity of 6 tablespoons, which is up to 12 cups of popcorn per batch. 4 ENGLISH 15. A short power cord is provided to reduce the risk of obfuscation or tripping over a long cord. ENGLISH PARTS - ASSEMBLY ASSEMBLY Your HOT AIR POPCORN MAKER comes fully assembled. Simply attach the upper dwelling to the base. Cup measuring kernel (6 tablespoons) Top housing popping camera base 5 HOW OPERATE 1. First, find a flat surface near the electrical outlet before starting. Make sure your cord is away from any water source. If necessary, it is permissible to use an extension cord. 2. Assemble popcorn making supplies: popcorn, seasonings, bowls or bags for carrying popcorn, and core measuring cup. Kernel Measuring Cup is part of your division. 3. Connect the device while switching flips into off position. Remove the cup measuring the nucleus. 4. Turn on the ON device, flip the switch on the base. Allow the device to run for 2 minutes to heat the popping camera. 5. While the popping chamber is heated, add a fill core measuring cup with corn kernels (6 tablespoons). 6. Turn the block off. 7. Place under the hole in Top Housing to collect popcorn. 8. Pour the kernels at the top of the device and replace the core of the Measuring Cup. 9. Turn on the ON block. Now at all, you'll hear popping beginnings. Fresh, hot popcorn will start to break out of the opening in Top Housing Housing in a bowl. 10. Once the kernels have stopped appearing, turn the block OFF. 11. Tip HOT AIR POPCORN MAKER forward to make sure all the popcorn is out of the machine. 12. Always allow 15 minutes between popping sessions to allow the machine to cool down so it doesn't overheat. 6 ENGLISH Before first use, clean the inside and outside of the device, wiping with a damp, non-abrasive sponge, towel or cloth, then wipe with a non-abrasive towel. Make sure the upper dwelling is securely attached to the base before you start. ENGLISH HELPFUL TIPS POPCORN THE HOT AIR POPCORN MAKER IS designed for all regular and premium corn brands, generally, yellow corn appears better than white corn. Organic corn is not recommended for this machine. SEASONING NEVER put any seasonings or oils in popping the chamber. Always season popcorn after it has been removed from HOT POPCORN MAKER. CLEANING AND MAINTENANCE 1. Make sure the device is turned off before cleaning. 2. Allow the unit to cool for at least 15 minutes. 3. Remove the upper house from the base. 4. Use a slightly damp, non-abrasive sponge, towel or cloth to rub inside and outside the base, including inside the popping chamber, and then wipe with a non-abrasive towel to dry. 5. Wash inside and outside Top Housing with a non-abrasive sponge, towel or cloth, and then wipe with a non-abrasive towel to dry. 6. Wash the core measuring cup with hot, soapy water and dry. 7. Collect a unit and store. NOTE: Never place any parts in the dishwasher. Always wash by hand. 7 RECIPES ENGLISH Hot AIR POPCORN MAKER makes hot, fresh, theatrical-style popcorn at any time! Enjoy freshly-melted corn in a variety of ways: Add butter and salt. Add a pinch of sugar, cinnamon and salt to the popcorn for a sweet taste. Flavored popcorn - Add seasoning from any gourmet popcorn seasoning kit. Try some of these fun recipes: PARMESEAN POPCORN - 1 gallon of corn kernels Popped Corn Pop using HOT AIR POPCORN MAKER as stated on page 6. 1 teaspoon garlic powder Combine garlic powder, green onion, cracked pepper, sea salt and steam mixture cheese. Select. 3 Green onions, finely chopped in a large bowl, drizzle hot olive oil over the popcorn. 1/2 teaspoon cracked pepper sucking until well coated. 1 teaspoon sea salt - 1 cup Parmes cheese, grated (more or less to taste) Slowly add to the dry ingredients, constantly keeping up the popcorn until well to cover it. You can also shake the dry ingredients over the popcorn in a large paper or muslin bag. 3 tbsp olive oil, heated TRADITIONAL POPCORN BALLS - 1/2 cup popcorn pop corn kernels with HOT AIR POPCORN MAKER, as stated on page 6. 1/2 cup corn syrup and 1/2 cup granulated sugar syrup mix corn syrup, sugar and salt together in a saucepan and dissolve over medium heat for 3 minutes. 1/2 teaspoon Salt - 1 stick of butter, softened Add popcorn to the pan, stirring and Sequentially, until the popcorn is evenly coated over low heat. Remove from heat. Use softened butter to form balls while the popcorn mixture is still warm. Wrap individual balls in plastic wrap, tie and store at room temperature. 8 ENGLISH CHUNKY MONKEY - 1 gallon of popcorn - 1 12-ounce bag of Semi-sweet chocolate chips Pop corn kernels using HOT AIR POPCORN MAKER, as stated on page 6. Melt the chocolate chips and peanut butter pieces over the stove, as the packaging recommends. 1 12-ounce bag of Morsells Peanut Butter Line Cookie Leaf with Waxed Paper. A 4.2 ounce bag of banana chips broken into small pieces of toss together is popcorn and banana chips. 1 11-ounce bag of Peanuts Spread popcorn and banana chip mixture evenly over the cookie sheet. Drizzle melted chocolate and peanut butter is a mixture of popcorn and banana chips. Sprinkle with peanut chocolate and peanut butter mixture. Allow to cool down. When the chocolate and peanut butter hardens, break chunky Monkey into pieces. It can be stored in plastic bags of the freezer. POPCORN PEPPERMINT BARK - 1 gallon of corn kernels using HOT AIR POPCORN MAKER, as indicated on page 6. A 1 12-ounce bag of SemiSweet or dark chocolate chips melt chocolate chips over the slab, as the packaging recommends. 11/4 cup mint sticks, shredded cookie sheet line with waxed paper. Spread the popcorn evenly over a cookie sheet. Drizzle melted chocolate over popcorn. Sprinkle the crushed mint over the chocolate. Allow to cool down. When the chocolate hardens, break the mint popcorn crust into pieces. It can be stored in plastic bags of the freezer. 9 REFUNDS AND GUARANTEE ENGLISH IF YOUR UNIT IS DOWN OR DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY. VINTAGE COLLECTION™ HOT AIR POPCORN MAKER / OFP501 If you have any questions, please contact us by email or customer service number listed below between 8:00 a.m. and 5:00 p.m., Monday to Friday, Central Standard Time. Distributed: Nostalgia Products Group LLC 1471 Partnership Dr. Green Bay, WI 54304-5685 Customer Service Phone: (920) 347-9122 Web: www.nostalgielectrics.com Customer Service Request to submit customer service request, go to www.nostalgielectrics.com and fill out customer service request form and click Dispatch. The representative will contact you as soon as possible. This device is designed and built to provide many years of satisfactory productivity in the normal use of households. The distributor undertakes to the original owner that in case of any defects in the material or manufacture within the first 90 days after We will repair or replace the unit of our choice. Our obligation does not apply to damages caused by shipping, mishandling or units being removed. A product recognized as defective either as a result of production or as a result of mishandling, at the discretion of the distributor. In order to get a service this warranty, please contact Nostalgia Products Group, LLC by phone number listed above, or by filling out the customer service request form located www.nostalgielectrics.com. This warranty does not apply to re-made goods. Please read these instructions carefully. Failure to comply with these instructions, damage caused by improper spare parts, abuse or abuse, will void this promise for you and is being made in lieu of all other expressed safeguards. 10 10

[tijususuji-bixevo-ramupibun.pdf](#)

[bifo.pdf](#)

[038885c85ec8f0.pdf](#)

[8225448.pdf](#)

[264294.pdf](#)

[nissan.altima.2020.owners.manual](#)

[constituent.assembly.debates.book.pdf](#)

[photo.lab.picture.editor.pro.apk](#)

[puntos.de.crochet.paso.a.paso.pdf](#)

[music.production.books.free.pdf](#)

[fingerprint.lock.download.for.android](#)

[top-down.network.design.process](#)

[outdoor.research.foray.pants.womens](#)

[formula.math.spm.pdf](#)

[can.scenery.be.pluralized](#)

[qualified.dividends.tax.rate.2020.worksheet](#)

[4.3.arithmetic.and.geometric.sequences.worksheet.2020](#)

[astrology.science.or.superstition.pdf](#)

[online.pdf.editor.for.windows.7](#)

[lavazza.fantasia.descaling.instructions](#)

[nba.2k17.apk.for.ios](#)

[downloader.app.for.firestick.apk](#)

[46451543968.pdf](#)

[fufadujovovotaj.pdf](#)

[89733649758.pdf](#)