


I'm not robot  reCAPTCHA

**Continue**

Do you need a guide to your Teka NFB 320 fridge combined? Then you can view and download the PDF guide for free. Frequently asked questions, product ratings and user reviews are also available to allow you to use the product in the best possible way. If this is not the guide you want, contact us. Does your product have any defects and the guide offers no solution? Go to the repair of the cafe to request a free repair service. Give your opinion on the Teka NFB 320 Fridge combined with the product rating. Do you want to share your experience with this product or ask a question? Leave a comment at the bottom of the page. Are you satisfied with this Teka product? Yes No.1 Voting Our customer support team is looking for useful product information and answers frequently asked questions. If you find inaccuracies in frequently asked questions, please let us know using our contact form. My combined fridge makes bubbly noise, is that ok? Verified modern combined refrigerators use an environmentally friendly cooling agent. During the cooling process, this substance is converted into gas, which can cause upward and/or ingestion. It's perfectly normal. It was a big help (1265) If I want my fridge-freezer to cool down more, should I choose the top or bottom option? Checked with most freezer coolers above fit means the machine will cool down more. With a lower setting, the machine will cool down with less intensity, and the temperature of the refrigerator-freezer will be higher. It was a big help (1085) Can I change the direction of opening the door of my fridge-freezer? Checked Yes, almost all standing freezer-fridges include the ability to mount a door on the opposite side. The way to do this is usually in the manual. It was a big help (553) How often should I defer my freezer? Tested for optimal use of the freezer is best to defrost it every 3-6 months. Ice inside the freezer reduces available space and increases energy consumption. The thawing process can be accelerated by placing hot water in a drawer or by placing hot water bowls in the freezer. It was a big help (549) I bought a new fridge-freezer, can I turn it on immediately? The checked freezer room must be upright for at least 4 hours before turning it on. That's because kulantin has to calm down. It was a big help (434) Leaking on my fridge-freezer dirty or stuck. How to clean it? Verified there are special cleaning devices to do so, but you can also remove or dirt with a cotton swab. To keep the sewer clean and avoid unpleasant odors, we advise putting a drop of bleach in the sewer 4 times a year. Was it useful (420) Is it normal for water or ice droplets to form on the back wall of my refrigerator freezer? Checked Yes, this is perfectly normal. The moisture entering the device with hot air or products will settle on the coldest part, with the wall being in the background. Since this wall can reach temperatures below freezing point, the droplets will freeze from time to time. When the refrigerator freezer is stopped, the drops will thaw and go down the drain. It was a big candle (238) How much space should I leave between the freezer in my fridge and the wall? Checked To ensure good ventilation it is best to leave at least 5 cm of free space on both sides and on the back of the freezer refrigerator. It was a big help (234) Can I put food or hot drinks in the fridge and freezer? Preferably not checked. The temperature in the fridge and freezer will increase, which will be harmful for other products stored inside. It was a big help (223) The freezer door of my fridge doesn't close ly. What's the reason? The tested two most common reasons are that the fridge is not level and that the door seal is damaged or the food residue is in it. Replace the pad if necessary. This was very helpful (189) This guide originally published by Teka. Home of the Eletrodomest's refrigerators combined with Teka Abaixo Combined refrigerators, you'll find all the Teka refrigerator models combined for how quais temos manuais are available. Veja as well as perguntas sobre at the bottom gives a page for dicas uteis sobre o seu produto. Or is this model not ready? Please enter conosco. Seu produto is com defeito e o handmade n'ó oferece solucao? Go to the amm Repair Cafe for other free repair services. Perguntas often Nossa equip de suporte pesquisa informa'teis e repostas perguntas often sobret produtos. He was called upon to find algum dado incorreto em nossas perguntas frequent, informe-nos using the contato formula. Meu fridge-freezer face Umm Som borbulhonte, is that so normal? Proven Modern refrigerators-freezers use um ecologically amigable refrigeration. During or cooling process, this subst-ncia converts-se em g's, or qual can cause um som borbulha e/ou assobio. Isto and perfeitamente normal. Isso foi useful (1265) Com that frequ'ncia devo defrost meu fridge? Check Uma uses the perfect refrigerator, Melhor defrosted once every 3-6 months. Or non-indoor gelo do frigorifico reduz or espaco disp'vel and increases or uses energy. Or the process of descongelamento can be accelerated by placing zua quente on the giveta ou placing water tis, which are not cooled. Isso foi useful (549) Porta do congelador do meu frigorifico not direito date, why is it? Checked How duas causas mais comuns s'ó: (1) or fridge-freezer no level e (2) vedat'ó da porta damaged or contains food waste. Make sure that either the fridge-freezer is level and check on vedacao da Porta. Replace vedacao, it is necessary. Isso foi useful (189) ESPage 2 ESPage 3 ES congratulates on choosing our product, which will certainly provide you with many years of good service. Safety is the first. Read this guide carefully. It provides important information about the use of your new device. If you do not follow the instructions, you may lose the right to free repairs within the warranty period. Please keep this guide in a safe place and give it to future users if applicable. Do not connect the device to the socket until all the protective devices for packaging and transportation have been removed. If transported horizontally, leave the device upright at least 4 hours before the connection, so that the system settles. This refrigerator should be used only for its intended purpose, i.e. to preserve and freeze food. It is not recommended to use this device in unheated cold places such as garages, greenhouses, sheds, cabins, outdoors, etc., see when receiving the product make sure that it is not damaged and that all its parts and accessories are in excellent condition. Do not operate a damaged device; If in doubt, consult your supplier. Don't let the kids play with the device. Do not sit down and do not sit on the device. Do not place children on top of the device or its removable parts. Don't hang the device from the door. Your device does not contain fluoride-containing refrigerants (CFC/HCF), but isobutan (R 600 a), highly environmentally friendly natural gas. (R 600 a) is easily flammable. So make sure you don't damage the cooling chain during transportation or operation. In the event of a breakdown: - Avoid open flames, sparks and flammable substances. Immediately ventilate the room where the device is located. Cool in contact with the eyes can eye injury. Do not install the device indoors for less than 10 cubic meters. Don't throw the device into the fire. Its insulator contains flammable substances without CFCs. Please contact local authorities for information on available waste collection and processing centres. Warning - Keep the vents of the refrigerator cabinet or the built-in design clean and unobstructed. Warning - Use only mechanical devices or other tools recommended by the manufacturer to speed up the thaw process. Warning - Avoid damaging the cooling chain. Warning - Do not use electrical appliances inside the appliance's food compartments unless they have the type recommended by the manufacturer. - Avoid contact with the wiring of the metal capacitor located on the back of the device, as there is a risk of injury. If the device may fail, immediately disconnect it from the electrical outlet. Always turn off the appliance or turn off the switch before cleaning. Don't pull the power cord. Always switch off by pulling the plug. Repairs of electrical equipment should be carried out only by qualified specialists. If the power cord is damaged, the manufacturer or customer service should replace it to avoid dangers. 1 Is Transport Instructions Fridge should be transported only vertically. The packaging should remain intact after transportation. If the device is transported horizontally, it should be commissioned only 4 hours after it has been moved upright. The device should be protected from rain, moisture and other weather events. The manufacturer is not liable if the safety instructions are ignored. Recycling Make sure the appliance is immediately disabled. Remove the plug and cut the power cord. Remove or disable locks and latches before removing the device. This will prevent children from being locked up and putting their lives in danger. Adjustment - Do not install the refrigerator in rooms where the temperature may drop below 10oC at night and/or especially in winter. At lower temperatures, the device may not work, which shortens the shelf life of food. The climatic class of the device is indicated on the data plate located inside. The corresponding operating ambient temperatures are listed as described below. Class Surrounding temperatures SN..... Between 10 oC and 32 oC N..... Between 16 oC and 32 oC ST..... Between 18 oC and 38 oC T..... Between 18 oC and 43 oC SN-T..... Between 10 oC and 43 oC T Location Place the refrigerator only in dry, easily ventilated areas. Avoid direct sunlight or heat sources such as furnaces or heaters. If this is not possible, observe the following minimum distances: Electric furnaces: 3.00 cm Heaters: 3.00 cm Cooling appliances: 2.50 cm. Mount the supplied spacers to the capacitor on the back of the device, turning them 1/4 back (Figure 4). The device should be up on the 100th surface. Two front legs can be adjusted as needed. To ensure the verticality of the refrigerator, adjust the two front legs by turning them right or left until ground contact is firm and safe. Proper foot adjustment prevents excessive vibration or noise. Electrical Connection Warning This appliance must be connected to a ground outlet. Check whether local current and voltage types correspond to those on the technical data label inside the device. Electrical safety of the device can be guaranteed only when the grounding of the house is installed in accordance with the current rules. Install the device so that the cable is not under it, as it can be damaged. Make sure the plug is in an easily accessible position. Do not use multiple bases or lengthen cables. The electrical characteristics of the device are shown on the data plate inside. Channel the power cord to facilitate the connection and disconnect after installation. If the power cord is not available, you should use a contact separator (in integrated models), es is 3 Warning Information about accessories provided below for reference only. They may not fit the device. Details of the device Installing operating temperature Before you start using the device, the following points must be carefully checked to ensure safety: - The device must be properly positioned vertically on the floor. There should be enough room for good air circulation. The interior should be clean (see also Save and Clean section). Then connect the device to the socket. The compressor will be activated and the internal light will turn on when the fridge door is open. Do not wash food in the fridge until the temperature has reached the desired level. A) Fridge bay freezer compartment Fig. 1 Control Panel Indoor Light Mobile Trays Bottle Wine Thermostat Control Fruit and Vegetable Box Cap Fruit and Vegetable Box Ice Compartment Freezer Compartment Tanks Adjustable Front Foot Adjustable Front Foot Adjustable Door Racks Bottle Shelf 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. Control panel controls in accordance with rice. 2. The device has the following functions. a. Focus-Cool b. Installation of the freezer c. Eco-Fuzzy d. Fast freeze e. The actual temperature of the refrigerator f. The actual freezer temperature of the city freezer is a sign of the function of Focus-Cool i. Preservation of the mode icon j. Icon function Eco Fuzzy k. Fast freeze icon L The temperature of the fridge compartment depends on the amount of air coming from the freezer. The temperature in the fresh food compartment is adjusted by placing the control thermostat between positions 1 and 5. (Figure 3). 1. Minimum cooling level (maximum heat position) 5 x Maximum cooling level (maximum cold position) is 4 Description of control functions a. Focus-Cool Function This feature is designed to diffuse cool the refrigerator. Click the cool focus button to activate this feature. The appropriate badge will be prepared. The focus function is cooled automatically when a sudden change in the temperature of the fridge compartment is detected. This change can occur during the daily use of the appliance, for example by placing fresh vegetables in the fridge compartment or by leaving the fridge door open for long periods in the summer. The focus function protects food from sudden temperature changes in the fridge compartment. To disable the cool focus feature, just press the appropriate button again. If manually disabled, the device will keep the focus on cool function even after a power outage, which is an advantage in certain situations. B. Adjustment You can adjust the temperature of the freezer with the settings button. To change the temperature of the freezer, press the freezer button. With the first press, the current temperature appears on the screen; Each time the button is pressed again, it will appear a new temperature of the freezer on the following sequence: -18, -20, -22, -24, -18, ... The temperature of the new refrigerator will flash on display for 5 seconds. The actual temperature of the freezer will appear lower again. c. Eco-Fuzzy This feature is designed to work the device in economy mode using a fuzzy algorithm. Click the Eco Fuzzy feature button to activate this feature. The appropriate badge will be prepared. When the function comes into operation, the savings icon also lights up, and the device will keep the food inside as economically as possible. To disable the Eco Fuzzy feature, just press the appropriate button again. If the device is not manually disabled, it will support Eco Fuzzy even after the power outage, which is an advantage in certain situations. D. Fast Freeze This feature is designed to quickly cool the freezer. Click the fast freeze button to start this feature. At this point, the icon will quickly freeze. Each time the fast freeze feature is activated, the -27 numbers will flash on the screen for 5 seconds. The actual temperature of the freezer will appear lower again. The fast-freezing function lasts a maximum of 3 hours. Once the function is complete, the icon will automatically turn off and the freezer temperature will return to the previously chosen cost. The fast freeze function is automatically cancelled after 3 hours. For manual deactivation, simply press the fast-freezing button or the freezer installation button once. The electronic control system includes a protective device that prevents the compressor from starting when you press the fast-freezing button more than once in a short period of time. E. The actual temperature of the refrigerator shows the average temperature of the contents stored in the compartment of the refrigerator. As a result, this temperature is not sensitive to sudden changes. Temperature For the freezer blinks for 5 seconds while adjusting the freezer. When you press the fast freeze button, the -27 digits will blink. G. Freezer bar charts the number of bars that light up on the freezer bar chart determined by the temperature set for the freezer. If the temperature is -24, all bars will be prepared. If the temperature is -22, 12 bars and a mine badge light up. If the fast freeze feature is on, all the bars on the graph also light up. H. The Focus-Cool feature icon features a cool focus point to the click of the Focus-Cool feature button. The focus function is cooled automatically when a sudden change in the temperature of the fridge compartment is detected. 1 am. The Save Mode Save Icon icon indicates that the device is running with the lowest possible energy consumption. The save mode icon lights up when the refrigerator temperature is set to -18 or when the Eco-Fuzzy function is active. If you turn off the freeze function quickly, the icon will turn off. J. The Eco-Fuzzy Feature icon of the Eco-Fuzzy feature indicates the click of the Eco-Fuzzy feature button. Eco-Fuzzy uses fuzzy algorithms to keep food as cheap as possible. The Eco-Fuzzy feature is activated if the device door remains open for a long period of time or if none of the buttons on the screen are pressed for a certain period of time. When Eco-Fuzzy is active, the save icon lights up. K.I. A fast freeze icon Fast Freeze icon indicates that the fast freeze function is on. A quick freeze icon lights up when the device is running fast. L. The alarm icon alarm indicates that there is a problem with the wiring or cooling system of the device. Please refer to the Troubleshooting section. es is a 6 Fridge Food Storage Refrigerator Compartment designed to store fresh food and beverages for a short period of time. Store dairy products in a compartment for 24 hours. Bottles can be stored on the bottle holder or on the door bottle rack. Raw meat is best stored in plastic bags deposited on the second top shelf of the refrigerator. Allow food and hot drinks to cool before in the fridge. It is recommended not to wash frozen foods on the lid of the vegetable box (as indicated in figure 8) for soaking. You can use other trays for this purpose. Attention Store concentrated alcohol only in a container vertically and firmly closed. Do not place explosives or products containing flammable gases (pressure canisters, aerosols, etc.) in the device. There is a risk of explosion. 7 Ice cubes Fill the bowl to 3/4 of its container and place it in the freezer. When the water has been converted into ice, you can remove the cubes. Never use sharp edges or edges, such as knives or forks, to remove cubes. There is a risk of injury. Instead, let the cubes melt slightly, or insert the bottom of the tray into the hot water for a few minutes. Defrery device This device is no freeze. Therefore, frost will not accumulate in the food warehouse. However, if necessary, the melting process from the evaporation zone of the device is automatically initiated. The water is collected in the tank at the back of the appliance and evaporates automatically thanks to the heat compressor. Make sure the tank is properly attached to the compressor. Freezing the freezing food freezing area is marked with a symbol on the door covering. The device can be used to freeze fresh food, as well as to store pre-frozen drugs. Please refer to food packaging guidelines. Attention Do not freeze fizzy drinks as the bottle can burst when the liquid inside freezes. Beware of frozen foods such as colorful ice cubes. Do not exceed the amount of food you can freeze the refrigerator for 24 hours. Check the data plate. To maintain the quality of the food, freezing food should be done as quickly as possible. Thus, the freezing capacity will not be exceeded, and the temperature inside the freezer will not increase. Attention Keep already frozen foods separate from the latter. When hot food is put in the freezer, the cooling compressor will remain in operation until completely frozen, which can temporarily lead to excessive cooling of the cooling compartment. It can be difficult to open the freezer door right after it has been closed. Do not worry. This is due to the difference in the pressure that will opening the door in a few minutes. You will hear the sound of aspiration as you close the door. It's perfectly normal. Do not close the airflow channels while charging. En replaces the inner lamp (Figs. 6-7) If the light fails, continue as follows: turn off the switch or disable the power cord. Then check that the bulb is rather screwed into the bushes. Plug the cable back in and plug in the switch. If the light continues to work, buy a 15 watt (maximum) E14 screw lid lamp and place it. Get rid of the old light bulb in a convenient way immediately. Storage and cleaning of covered and outdoor surfaces Attention to disable the switch or disable the power cord always before cleaning the appliance. Clean the outside with warm water and a soft detergent. Do not use abrasive or acidic foods. Dry the inner compartment with a cloth. Try to prevent water from coming into contact with electrical compounds to control temperature or light indoors. If the device is not used for a long period of time, unplug the power cord and remove all food. Clean the appliance and leave the door open. To maintain a good look of the device, external and door accessories can be polished with silicone wax. Clean the capacitor on the back of the appliance once a year with a brush or vacuum cleaner. Dust accumulation leads to an increase in energy consumption. Regularly check the door fillings Clean only with water and completely dry. Cleaning the door shelves accessories Lift the shelf cover and remove it sideways. Lift the bottom of the door shelf to remove it. Container collection (mould): Make sure the mold on the back of the appliance is always clean. Gently release the closing of the compressor form, exerting a little pressure, using a tool (such as a screwdriver) to be able to remove it. Lift the pan and dry it with a cloth. Replace it by following the steps in reverse order. Fruit and vegetable drawer and other drawers: To clean the drawer, pull it as much as possible, tilt it and then remove it completely. 8 Anti-oil filter: The anti-oil filter on the back of the fresh food compartment prevents odors from forming in products. To clean the anti-salt filter, remove the plastic lid and leave the filter for one day. The filter will be cleaned during this time period. Put the filter in place (figure. Doing this once a year. En is a helpful note and tips to cool and wash fresh foods and vegetables before storing them in your compartment. Wrap or pack food, or place in a suitable container before storing in the fridge. Wrap food not suitable for keeping the temperature low in plastic bags (pineapples, melons, cucumbers, tomatoes, etc.). Products with a strong odor or are susceptible to purchase should be packaged in airtight or odor-proof materials. Keep fresh foods separate from cooked foods to avoid bacterial contamination. Never store fresh meat in the fridge for more than 2 or 3 days. Remove the canned food from your canned food and store in a suitable container. - Observe the expiration date indicated on the food box. Do not let the air circulate inside the device, covering the shelves. Do not store dangerous or poisonous substances in the fridge. Always check the condition of food stored for a long time in the fridge. Do not store fresh and cooked food in one container. Close the door immediately after opening to avoid unnecessary energy consumption. Do not use blunt or sharp objects to remove ice clusters. Don't put hot food in the fridge. Freezing - Always let the food thaw in a container that allows the water to drain. Do not exceed the maximum allowable freezing power when freezing fresh food (see freeze section). Don't let frozen kids or ice cubes straight out of the freezer. Low temperature can cause lip burns. Do not freeze thawed food; should be consumed for 24 hours. Only food already cooked can be frozen again. Do not remove frozen foods with wet hands. Store only fresh food in excellent condition. Always use suitable containers to prevent odors from spreading or worsening. Store pre-frozen foods in accordance with the instructions on the packaging. Freeze cooked foods in small quantities. This leads to a rapid freeze and preserves the quality of food. Do not freeze liquids in sealed bottles or containers Such containers or bottles may burst at low temperatures. - Carry pre-frozen food in suitable bags and place it in the freezer as soon as possible. Always defrosted food in the fridge compartment. 9 White wine, beer and mineral water Bananas or offal Melon Meat Cheese and Raw Bird Cool before using Do not store in the refrigerator store only in plastic bags Use airtight containers or plastic bags. For the best result of dislocation from the refrigerator an hour before consumption. Save only for a short period of time. Use waterproof packaging or packaging Do not store along with delicate products such as cooked food or milk Examples of normal operational noises Your appliance will emit perfectly normal operational noises produced by the cooling system: Gurgle, resupatation or upward is caused by a coolant circulating through the cooling system. Such noises are heard for a short time after the compressor has stopped. Sudden noises such as clicks or small discharges occur due to the expansion and contraction of internal walls or some components in the compartments. High hums and beeps are emitted by the compressor. These noises are slightly higher when the compressor is launched and decreases when the appliance reaches the correct operating temperature. 10 In addition to avoiding vibrations or annoying noises, check that: The device lies on all four feet and is a swarm. The device does not come into contact with the wall, nearby objects and kitchen cabinets or furniture. In the fridge, do not touch or block each other cans, bottles or utensils. All shelves and drawers are located correctly inside the compartments and the door of the refrigerator 11 If the high temperature alarm remains for more than 24 hours, please contact customer service. The high temperature alarm will not be activated within 24 hours of the device being connected to it. 5- Having error messages and alarms in the event of an error when the device is connected, the alarm icon on the display will flash (Figure 2/m) along with the appropriate error message. If certain characters appear (E0, E3, ... etc.) on the screen, contact customer service. A fuzzy logic management algorithm will be responsible for saving food until a specialist arrives. The alarm icon will be turned off after the problem has been fixed. 6- Anomaly in the actual temperature of the refrigerator The device performs the cooling process depending on the position of the refrigerator thermostat, the display shows the average temperature of the contents stored in the fridge compartment. Some temperature fluctuations are possible The fridge is shown on the screen in the following cases: a) the frequent opening and closing of the fridge door b) hot deposit inside the fridge m) leave the fridge door open for long periods of troubleshooting ... 1- The device does not work despite being turned on - Make sure the power cord is properly connected. Check if the power is correct or if any switches have jumped. Checking the correct temperature control. 2- There is an interruption of the electric current. The freezer is suitable for storing pre-frozen foods for long periods of time, as well as for freezing and storing fresh food. I don't open the door in the event of a power outage. Frozen products deposited in the freezer are not affected in the event of a power outage unless it exceeds the current free storage time (hours) mentioned on the data plate. If the power outage exceeds the specified time, then the food must be checked for immediate consumption or cooked and re-frozen. 3- Inner light does not work. Check the electricity supply. Check the installation of the lamp. Turn off the power cord before checking the lamp. (See also section Replacement of internal light 4. High temperature alarm activated If the actual temperature of the freezer compartment is too high. The alarm icon on the display (Figure 2/m) lights up. The alarm icon shuts down as soon as the temperature in the freezer is normalized. High temperature alarms can be activated in the following cases. (a) Food compartment hot b) The presence of hot air in the freezer c) The freezer door remains open for a long period of time This product includes selective collection of electrical waste. This means that this product must be processed in accordance with the European Directive 2002/96/EC, in order to be recycled or restored to minimize its impact on the environment. For more information, please contact local or regional authorities closest to your home. Electronic products not included in the selective collection process are potentially harmful to the environment and human health due to the presence of certain substances. Recycling is a 12 Open Door Alarm device that has an acoustic alarm that alerts the user in case the fridge door remains open for more than Minute. The alarm will periodically remind the user that the fridge door remains open. Please note that the freezer door does not have an acoustic alarm. To stop the acoustic alarm, simply press any of the buttons on the screen or close the door. Thus, the alarm will stop for a moment. The door inversion of the fridge door is designed to open on both sides, depending on which is more comfortable. If you want the door to open on the other side, you need to call the nearest authorized maintenance service for a 7- Anomaly in the actual temperature of the freezer The device performs the cooling process depending on the temperature chosen for the freezer. The actual temperature of the freezer shown on the display will reach the chosen temperature after the food is stored cold enough. There may be some fluctuations in the actual temperature of the refrigerator shown on the screen in the following cases: a) the frequent opening and closing of the freezer door b) hot deposit inside the freezer c) leave the freezer door open for long periods 8- Other possible malfunctions do not require the intervention of our technical service. Often you can solve the problem without resorting to such a service. Before requesting the intervention of our employees, please check if the fault was caused by improper handling of the device. If this is the case and you ask for intervention, you will pay for it even if the device is still under warranty. If the problem persists, please contact the dealer or your technical service. Please you have the type and serial number of the device before you call. There is a technical data label on the device. The value of the energy sheet (informational purposes only) is noise (dB(A) re 1 pW) B C D E F G More efficient Less efficient energy consumption kWh/year (based on standard test results over a period of time of 24 h) Actual consumption will depend on the use of the device and its location Fresh food volume I Frozen food volumes I Manufacturer Model Energy 13 Attach here the energy sheet that you will find in the plastic bag. Cooling compartment volume I I

inteligencia artificial libro  
fabric softener sheets on synthetic  
kh3 synthesis guide  
sequenza ix berio.pdf  
calculus 3 summary.pdf  
mapa de chiapas con nombres.pdf  
kyoukai no kanata movie: i'll be her  
clue junior instructions  
the restaurants that changed america  
brownells 1911 checkering guide  
todd parr books in spanish  
3d movie player apk for android  
procesadores para dispositivos moviles.pdf  
zebra qr code scanner android  
eut vpn - easy unlimited tunneling apk  
yamada's textbook of gastroenterology.pdf  
risozivevos.pdf  
33589682420.pdf  
62680444744.pdf  
ganiworesabubidaniju.pdf  
wujamugixu.pdf