



I'm not robot



Continue

## Asko dishwasher manual d3122

335 Asko Dishwasher Guide and User's Guide (711 Model) Found in All-Guides Database # Model Type Document 1 Asko 1805 FI Asko Dishwasher 1805 FI Installation instructions guide (12 pages, 0.24 Mb) 2 Asko D1976CUS 3 Asko D1996CUS Asko Dishwasher D1996CUS Manual d'utilisation et d'entretien (12 pages, 0.23 Mb) 4 Asko D198 Asko Dishwasher D198 User and maintenance manual (28 pages, 0.26 Mb) 5 Asko DC 7171 6 Asko D5112XXL Asko Dishwasher D5112XXL Installation instructions guide (16 pages, 1.23 Mb) 7 Asko D5132XXL Asko Dishwasher D5132XXL Installation instructions guide (16 pages, 1.23 Mb) 8 Asko D5223XXL 9 Asko D5833XXL Asko Dishwasher D5833XXL Installation instructions guide (16 pages, 1.23 Mb) 10 Asko D5223XXLHS Asko Dishwasher D5223XXLHS Planning and design guide (3 pages, 1.21 Mb) 11 Asko D5233XXLFI Asko Dishwasher D5233XXLFI Planning and design guide (3 pages, 1.21 Mb) ASKO USE AND MAINTENANCE GUIDE SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE OATH! Om fr At T - mance f oper or IMPOR or all those using ead perf or best , et asher r e bef T our uctions. g o y instr time ing st d 3122 CONTENT BEFORE USING NEW DISH ALL 2 IMPORTANT SAFETY INSTRUCTIONS 2 CHILDREN SAFETY TIPS 2 DISHWASHER FEATURES 3 LOADING BASKETS 4 DETERGENT DISPENSER 5 Dish DETERGENT 5 RINSE AID DISPENSER 6 OPERATING INSTRUCTIONS 7 MAINTENANCE AND CLEANING 8 OVERFILL PROTECTION 9 ENERGY SAVING TIPS 9 COMMON SOLUTIONS TO DISHWASHER PROBLEMS 10 TROUBLESHOOTING 11 WASHING SPECIAL ITEMS 13 INDEX 14 ASKO PRODUCT WARRANTY 15 BEFORE USING A NEW DISHWASHER ♦ Read this guide before trying to use your new dishwasher. ♦ a special items wash section before you have any porcelain or chinese on-glaze decoration, crystal glass or wood or plastic items. ♦ Make sure the door is properly balanced. To do this, open it up a bit and let it go. It should stay where you published it. Otherwise, contact the Installation Instructions or contact your installer. ♦ Call your local water company to find out about the water hardness in your area. You need to know this to determine how much detergent and rinse aid you use. IMPORTANT SAFETY INSTRUCTIONS This guide does not cover all possible circumstances and circumstances that may occur. Common sense and caution should always be used when setting up, operating and maintenance of any device. ♦ read all instructions before using the dishwasher. ♦ Sle machines must be electrically grounded. Read the Setup Instructions for details. ♦ Busk the dishwasher only for the intended purpose. ♦ start the dishwasher when you leave the house. ♦ Only use automatic dishwasher detergents and rinsing agents. ♦ reduce the risk of getting a life-old, keep detergents and rinsing aid out of reach of children. ♦ Doors do not load sharp items; You could damage the door seal. ♦ Place the hard Cut down sharp ends in the silver basket to avoid the risk of type injury. ♦ Do not wash plastic items unless the dishwasher is marked as safe or equivalent. Check the manufacturer's recommendations for unmarked items. Unsafe items in the dishwasher can be deformed or melted, potentially a fire hazard. ♦ Do not touch the heating element during or after use. ♦ Do not start the dishwasher unless all housing panels are properly placed (e.g. protection plate, access panel, toe kick, etc.) ♦ Do not tamper with the controls by removing or changing them. ♦ Do not abuse, sit on or stand on the door or baskets of the dishwasher. ♦ children play in the dishwasher or dishwasher to reduce the risk of getting hurt. ♦ Under certain conditions, hydrogen gas can be produced in a hot water system that is not used for two weeks or more. HYDROGEN Gas Is Explosive. If the hot water system has not been used for two weeks, turn on the entire hot water tap before using the dishwasher and let the water flow from each one for a few minutes. This will release any accumulated hydrogen gas. Do not smoke or use open flames during this time as the gas is flammable. ♦ When removing or throwing an old dishwasher out of service, remove the door to the washing compartment. ♦ Do not store or use flammable materials, gasoline or other flammable vapours and liquids around this or any other device. ♦ power to the dishwasher before serving. ♦ contractor must be carried out by a qualified technician. CHILD SAFETY TIPS ♦ Dishwasher detergents and rinsing assistants are abrasive, so always store them out of reach of children. ♦ a child swallows dishwasher detergent or helps rinse, give plenty to drink immediately, i.e., one or two glasses of milk or water. Do not try to cause vomiting. Seek medical attention immediately: 1-800-POISON1 ♦ Always close the door and start the dishwasher as soon as you put in the detergent. ♦ keep young children away from the machine when they are always on. There may be some detergent residue left inside the machine. ♦ the dishwasher detergent enters someone's eye, rinse with plenty of water for at least 15 minutes. ♦ let kids use or play in a dishwasher or dishwasher. ♦ All long and sharp items in the knife/utensils basket. If this is not possible, load sharp objects with the pointed tip facing the back of the dishwasher. Sharp items loaded into the silver basket must be loaded with pointed down. ♦, activate the child safety lock. (See below.) CHILD SAFETY LOCK ENTRY This model has a child safety lock to the left of the doorkn arm. To activate the lock, press the door handle and screwdriver. Reset the slot by turning it horizontally. To open the door in the safety lock Press the white plastic plate to the left of the door handle and hold the door handle as it lifts. (See the picture on the right.) Page 2 DISHWASHER FEATURES NOTE: Depending on the model, deviations may occur in the properties. Top Basket Spray Sleeves Fork Basket Bottom Basket Detergent Dispenser Rinse Help Dispenser There beforeis though there is no load larger rinsing food machine, items need to be remove. Particuls Filter BASKETS Top Basket Bottom Basket Cup rack Easy drawer handle Cutlery Foldable handle Cutlery small items coverage cover COVER BASKETS LOADING BASKETS The new dishwasher ASKO Self Cleaning System™. This means that after pre-washing, main washing and intermediate rinsing, the water is drained and the cycle continues with clean water. If you plan to start your dishwasher immediately, you don't need to do the dishes. However, you need to scrape large particles of food before loading. DO NOT LOAD THE TOP BASKET After scraping large food particles, place cups, cups, plates, bowls and small plates in the top basket. The foldable cup rack on the left side of the basket gives you an additional place to stack cups and small bowls. NOTE: When loading sharp items, always be careful not to cut the rack overlay. LOADING INTO THE BOTTOM BASKET Load larger items such as dinner plates, pots and pans, serving plates and casserole into the bottom basket. Make sure it loads dish products that look in the middle of the dishwasher or down. SILVER BASKET LOAD The silver basket is designed with eight compartments to help keep silver separate. Load the silverware with downward levers and release as much as possible to avoid nesting. For safety, load sharp blades up the sleeves. Avoid placing silverware made of different materials (e.g. silver and stainless) in the same compartment due to the risk of discolor changes. (See page 13.) Small Goods Housing Cover In the middle of the silver basket is a lid that leans down over the compartments on the left or right, including small, lightweight items that can slide from shelf forks or wash from the basket. Small items are grooved cover, so you can also use it to keep the silver separate, like teaspoons. When loading silverware to cover coverage of small items, try to avoid nesting spoons and forks. DETERGENT DISPENSER ASKO dishwashers are designed to be energy efficient. Because the machine uses less water than traditional dishwashers, you also use less detergent and rinsing aid. Usually only one tablespoon of detergent is required for a normal washing load. However, the amount of detergent required for your dishes may be more depending on the hardness of the water in your area. (See below.) Also, you need more heavily contaminated items For main washing, measure and place the detergent in the large detergent compartment. For pre-washing, the detergent goes to the small compartment to the right of the main washing compartment. You should use half the amount of detergent for the pre-washing you use for the main wash. The amount of detergent used in main washing and pre-washing should never be above three tablespoons. Always add the detergent just before starting the dishwasher, otherwise it may be moist and does not melt properly. FOREIGN DETERGENT We recommend using only odorless, grainy automatic dish washing detergent. Using the wrong detergent can cause flooding and/or damage your dishwasher. Do not use wet and clustered detergent. Also, check the container's expiration date. The amount of detergent needed may vary depending on the differences in water hardness. To determine water hardness in your area, contact your local water treatment company or regional water softening company. The harder the water, the more detergent you may need. See chart Prewash Detergent Compartment Dispenser Cover Rinsing Help Lever Level Indicator Main Wash Detergent Compartment Rinsing Aid Compartment Detergent Compartment Cover WARNING! Dishwasher detergent is abrasive! Be careful to keep it out of the reach of children. NOTE: We recommend that you do not add pre-washing detergent for the quick wash program. NOTE: If you are using dish washing detergent with rinsing aid additives, you should not fill the rinsing aid dispenser. This could suck a movie on your plates. WATER HARDENING WATER HARDNESS DETERGENT AMOUNTS OF DETERGENT REQUIRED TO BE EXECUTED Soft Pre-wash 1 teaspoon (0-3 grains per gallon) Main wash 1 to 1-1/2 tablespoons Medium Pre-wash 1 teaspoon (4-8 grains per gallon) Main wash 1-2 tablespoons Hard Pre-Wash 1 teaspoon (9+ grain\*) Main wash 2 to 3 tablespoons \* 12 grains and higher is extremely hard water. See below for more information. Twelve and higher extremely hard water and detergent alone may not be enough. You may need to use a water softener to maximize the performance of your dishwasher. In addition, in areas with hard water (9+), you may need to wash at lower temperatures to prevent hard puddles from forming in the tank and washing system. In hard water areas, both dishes and the machine can develop a white or gray film after a while. This citric acid can be removed by changing the detergent to pre-wash with two tablespoons. If the water is too hard, use a rinsing aid containing citric acid. Different dishwasher detergent brands have different amounts of phosphorus to soften the water. You may need to use a detergent with less than 8.7% phosphorus content or a detergent with more than 8.7% phosphorus content. Content.