


☐

I'm not robot


reCAPTCHA

Continue

Hunter fan remote instructions 99122

Installation turned off Before installing delete canopy. If you are unsure of the universal remote control how to remove it, refer to the fan receiver, use the chain operating instructions. With wiring exposed, to set the fan speed to high, it can be useful to note the existing wire and light on the ON. Be connected or take a digital photo to make sure the power is turned off before the link. Remove the wired connectors that continue with installation. connecting the wires from the output box to the fan and leaving the grounded wires connected. Connection blue (off) black (out) white (common out) CONNECT WIRES FROM RECEIVER TO FAN - Using blue wire connectors, connect the white wire from the receiver (marked common out) to the white wire from the fan. Connect the black wire from the receiver (marked expansion) to the black wire from the fan. Connect the blue wire from the receiver (marked light out) to the blue wire (or possibly black with white stripe) from the fan. If you are unsure about the colour of the wires or the connection, contact a qualified electrician. To turn off circuit breakers in the output box and the associated switch location before installing or maintaining the fan before installation or maintenance. If you cannot lock the circuit breakers in the off position, securely attach a prominent warning device, such as a marker, to the service panel. Universal 3 Speed Ceiling Fan Remote Model 99122. 99123 Receiver or Canopy Select the suspension system that most closely resembles the one used by your fan and install the receiver as specified and wire as directed. Note: Some fans may have a significant excess lead wire. For easier installation of the canopy, cut the excess wire, leaving at least 8 remaining. The fan wires 1/2 are re-run. Place the remaining excess wire in the ceiling electric box. The holder and fan must remain properly grounded. If the fan is installed on an oblique ceiling, installation problems may occur. For help, call 1-888-830-1326. Blue Black White M0060-01 • 08/27/13 • © Hunter Fan Company If you are installing multiple remote-controlled fans on the same circuit breaker, you may need to take several additional steps to prevent interference or mismanageing of the remote controls. Go to www.HunterFan.com/FAQs and click How to properly install multiple remotely operated fans? for further information. Receiver Ceiling plate or receiver Canopy Canopy black (live in) black (uneaground) white (neutral) white (grounded) CONNECT WIRES FROM RECEIVER TO WIRES FROM THE OUTPUT BOX - Using orange wire connect the black wire (uneached) from the ceiling to the black wire from the receiver (marked live in). Connect the white wire (grounded) from the ceiling to the white wire from the receiver (marked neutral in). After connecting all the wires and securing with wire connectors, reinstall the canopy. and carefully push them back through the hinge holder into the outlet box. Spread the wires apart, with grounded wires on one side of the output box and uneached wires on the other side of the output box. www.HunterFan.com 1.888.830.1326 For low for le fans, the receiver should be attached to the ceiling holder with cable tie. Cable tie Ceiling bracket or receiver Install the fan body OFF Remove the canopy before installation. If you are unsure of the universal remote control how to remove it, refer to the fan receiver, use the chain operating instructions. With wiring exposed, to set the fan speed to high, it can be useful to note the existing wire and light on the ON. Be connected or take a digital photo to make sure the power is turned off before the link. Remove the wired connectors that continue with installation. connecting the wires from the output box to the fan and leaving the grounded wires connected. Connecting blue yellow CONNECT WIRES FROM RECEIVER TO FAN - Using orange wire connectors, connect the blue wire from the receiver to the blue wire (or possibly black with white stripe) from the fan. Connect the yellow wire from the receiver to the black wire from the fan. If you are unsure about the colour of the wires or the connection, contact a qualified electrician. To turn off circuit breakers in the output box and the associated switch location before installing or maintaining the fan before installation or maintenance. If you cannot lock the circuit breakers in the off position, securely attach a prominent warning device, such as a marker, to the service panel. Universal 3 Speed Ceiling Fan Remote Model 99122. 99123 Receiver or Canopy Select the suspension system that most closely resembles the one used by your fan and install the receiver as specified and wire as directed. Note: Some fans may have a significant excess lead wire. For easier installation of the canopy, cut the excess wire, leaving at least 8 remaining. The fan wires 1/2 are re-run. Place the remaining excess wire in the ceiling electric box. The holder and fan must remain properly grounded. If the fan is installed on an oblique ceiling, installation problems may occur. For help, call 1-888-830-1326. Blue Black M0060-01 • 01/15/14 • © Hunter Fan Company If you are installing multiple remote-controlled fans on the same circuit breaker, you may need to take several additional steps to prevent interference or mismanageing of the remote controls. Go to www.HunterFan.com/FAQs and click How to properly install multiple remotely operated fans? for further information. Receiver Ceiling plate or receiver Canopy Canopy black (uneached) white white white (grounded) Connect wires from receiver and fan to wires from the output box - Using orange wire connectors connect a black wire from the ceiling to the black wire wire Receiver. Connect the white wire (grounded) from the ceiling to both the white wire from the receiver and the white wire from the fan. After connecting all the wires and securing with wire connectors, reinstall the canopy. Turn the joints upwards and carefully push them back through the hinge holder into the outlet box. Spread the wires apart, with grounded wires on one side of the output box and uneached wires on the other side of the output box. www.HunterFan.com 1.888.830.1326 For low for le fans, the receiver should be attached to the ceiling holder with cable tie. Cable tie Ceiling holder or receiver Fan Body www.HunterFan.com 1.888.830.1326 Fan shutdown button only turns off the fan. To turn on the fan, press one of the fan speed buttons. High Medium LowPairingSin 3 minutes to restore fan power, press Fan Off and High button for at least 4 seconds. Your fan turns on low, which means successful synchronization. If not, turn off the fan power, wait 1 minute and try again. If you are using a multi-fan transmitter, repeat this procedure for each fan. Note: The remote control must be paired before the fan can operate. Fan OffHighQuickly press the Light button to turn the lights off and on. Hold down the Light button to raise and dim the light level. LightOpera MaintenanceThey want to install the cradle of the transmitter, remove the two screws that hold the switch cover plate. Do not remove the cover plate. Direct the cradle by aligning the two mounting holes with the holes on the cover plate. Insert and tighten the screws. Do not tighten too much. Note: For paddle-style switches, press outwards to break the paddles on the cradle. Installing or replacing the battery To access the battery compartment, remove the small Phillips head screw that secures the battery door to the transmitter assembly. If necessary, replace it with a CR2032 battery. The battery should be installed with the positive (+) side up. Phillips Head ScrewBattery DoorLowMedium321M0060-01 • 08/27/13 • © Hunter Fan CompanyONTurn PowerTroubleshootingSafe-ExitThis device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must not cause harmful interference and (2) this device must accept any interference received, including interference that may cause unwanted operation. This device is in line with Canada's RSS-210 industry. Operation is subject to the following two conditions: (1) this device must not cause interference and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This device has been tested and found to meet the limits for Class B digital devices under Part 15 of the FCC rules. These limits are designed to provide adequate protection against harmful interference in residential installations. This device and may emit radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that there will be no interference in a particular installation. If this device causes harmful interference to radio or television reception, which can be determined by turning the device off and on, we advise the user to try to remove interference by one or more of the following measures: Reorient or move the receiving antenna. Increase the distance between the device and the receiver, Connect the device to a socket on a different circuit than that to which the receiver is connected. Contact your dealer or experienced radio/TV technician for help. Note: Any changes or modifications each transmitters or receivers that are not expressly approved by Hunter Fan Company may revoke the permission to operate this remote control. Read and save these instructionsThis product complies with UL 507.WARNINGFan will not start• Make sure the switch and switch are switched on. • Make sure the battery is working. • Make sure the transmitter and receiver are paired. • Check the connection of the wires inside the canopy. The fan remote control is errate• Make sure the battery is installed correctly. • Install a new battery. The transmitter only works if it is held in close range• Replace the battery. Lights do not dim• Make sure the CFL bulb is installed. The control has a function that automatically detects CFL bulbs and turns off dimming when a CFL bulb is installed. CFL bulbs kicker• Turn the light off and on. Hold down the Start button within three minutes and press the Light button twice. If the problem is not resolved, repeat the process up to three times. • Press the Fan Off button for at least three seconds to start safe output mode. • The dash lights for visual confrmation. • The lights remain at 50% brightness for 15 seconds and then start dimming. After a total of 30 seconds, the lights go out. Note: For CFL lighting, the lights remain at 100% brightness for 30 seconds. After a total of 30 seconds, the lights go out. The safe-exit program gives you about thirty seconds of light when you turn off the lights to leave the room before the lights go out. To use Safe-Exit:HUNTER FAN COMPANY CONTROL LIMITED WARRANTYSThe Hunter Fan Company provides the following limited warranty to the original buyer control (Control): Your inspection is entitled to be free of defects in materials and workmanship for one year from the date of sale. If the Proceedings are breached or failed within the warranty period due to material or workmanship defects, we will replace it free of charge. IF THE ORIGINAL BUYER CEASES TO OWN THE CONTROL, THE WARRANTY AND ANY ESTIMATED WARRANTY, INCLUDING BUT NOT LIMITED TO THE EXPECTED GUARANTEE OF MARKETABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE VOID. THIS WARRANTY IS EXPLICIT INSTEAD OF ALL OTHER WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED GUARANTEE OF MARKETABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO ANY CONTROL, IS EXPRESSLY LIMITED TO THE PERIOD OF EXPRESS WARRANTY SPECIFIED ABOVE FOR SUCH CONTROL. This warranty excludes malfunctions or malfunctions caused by repairs by us that are not approved by us, mishandling, improper installation, modificationfiction or damage to the Control in your possession or improper use. This warranty does not cover batteries or damage or damage to the product caused by the use of defective batteries. To receive a refund, return your prepaid shipping receipt along with proof of purchase by hunter fan company services at 7130 Goodlett Farms Pkwy., Memphis, TN 38016. HUNTER FAN COMPANY SHALL IN NO EVENT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATION OF THE WARRANTY OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. HighFan OffCradleTabs If you have problems installing or operating a fan, do not return this product to the dealer. Call our consumer affairs hotline.1-888-830-1326 Use the tow chain switch on the fan to set the fan speed to a high position before operation. IMPORTANT operation. Important